



# ***Operator's Manual***

Serial Number Range

**Z-45/25**  
**Z-45/25J**

***IC Power***

from Z452513A-47001

ANSI/CSA  
North America  
South America  
Asia

with  
Maintenance  
Information

Fifth Edition  
Fourth Printing  
Part No. 218568

---

## Contents

Introduction .....	1
Symbol and Hazard Pictorials Definitions.....	5
General Safety .....	7
Personal Safety.....	13
Work Area Safety.....	14
Legend .....	22
Controls.....	23
Inspections.....	31
Operating Instructions.....	44
Transport and Lifting Instructions .....	51
Maintenance .....	54
Specifications.....	58

---

Copyright © 2012 Terex Corporation

Fifth Edition: Fourth Printing, July 2013

Genie and "Z" are registered trademarks of Terex South Dakota, Inc. in the U.S.A. and many other countries.


These machines comply with  
ANSI/SIA A92.5  
CAN B.354.4

# Introduction

## About this manual

Genie appreciates your choice of our machine for your application. Our number one priority is user safety, which is best achieved by our joint efforts. This book is an operation and daily maintenance manual for the user or operator of a Genie machine.

This manual should be considered a permanent part of your machine and should remain with the machine at all times. If you have any questions, contact Genie.

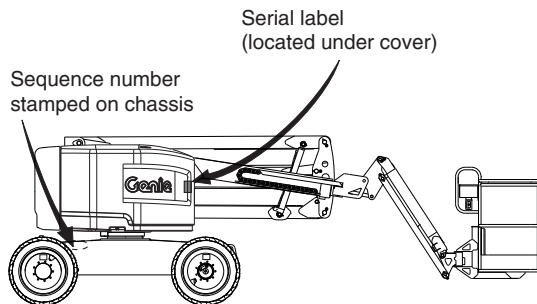

## Intended Use

This machine is intended to be used only to lift personnel, along with their tools and materials to an aerial work site.

## Bulletin Distribution and Compliance

Safety of product users is of paramount importance to Genie. Various bulletins are used by Genie to communicate important safety and product information to dealers and machine owners.

The information contained in the bulletins is tied to specific machines using the machine model and serial number.

Distribution of bulletins is based on the most current owner on record along with their associated dealer, so it is important to register your machine and keep your contact information up to date.

To ensure safety of personnel and the reliable continued operation of your machine, be sure to comply with the action indicated in a respective bulletin.

---

# Introduction

## Contacting the Manufacturer

At times it may be necessary to contact Genie. When you do, be ready to supply the model number and serial number of your machine, along with your name and contact information. At minimum, Genie should be contacted for:

Accident reporting

Questions regarding product applications and safety

Standards and regulatory compliance information

Current owner updates, such as changes in machine ownership or changes in your contact information. See Transfer of Ownership, below.

## Transfer of Machine Ownership

Taking a few minutes to update owner information will ensure that you receive important safety, maintenance and operating information that applies to your machine.

Please register your machine by visiting us on the web at [www.genielift.com](http://www.genielift.com) or by calling us toll free at 1-800-536-1800.

# Introduction



---

## Danger

Failure to obey the instructions and safety rules in this manual will result in death or serious injury.

---

## Do Not Operate Unless:

- You learn and practice the principles of safe machine operation contained in this operator's manual.
  - 1 Avoid hazardous situations.**
  - Know and understand the safety rules before going on to the next section.**
  - 2 Always perform a pre-operation inspection.
  - 3 Always perform function tests prior to use.
  - 4 Inspect the workplace.
  - 5 Only use the machine as it was intended.
- You read, understand and obey the manufacturer's instructions and safety rules—safety and operator's manuals and machine decals.
- You read, understand and obey employer's safety rules and worksite regulations.
- You read, understand and obey all applicable governmental regulations.
- You are properly trained to safely operate the machine.

# Introduction

## Safety Sign Maintenance

Replace any missing or damaged safety signs. Keep operator safety in mind at all times. Use mild soap and water to clean safety signs. Do not use solvent-based cleaners because they may damage the safety sign material.

## Hazard Classification

Decals on this machine use symbols, color coding and signal words to identify the following:



Safety alert symbol—used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

### **▲ DANGER**

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

### **▲ WARNING**

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.






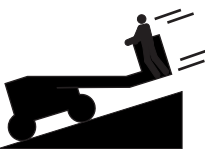









### **▲ CAUTION**

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.







### **NOTICE**

Indicates a property damage message.

## Symbol and Hazard Pictorials Definitions


 <p>Electrocution hazard</p>	 <p>Maintain required clearance</p>	 <p>Explosion hazard</p>	 <p>Explosion hazard</p>	 <p>Collision hazard</p>
 <p>Runaway Hazard</p>	 <p>Tip-over hazard</p>	 <p>Crush hazard</p>	 <p>Color Coded Direction Arrows</p>	 <p>Wind speed</p>
 <p>Side force</p>	 <p>Maximum capacity</p>	 <p>Voltage rating for power to platform</p>	 <p>Pressure rating for air line to platform</p>	 <p>Replace tires with tires of same specification.</p>
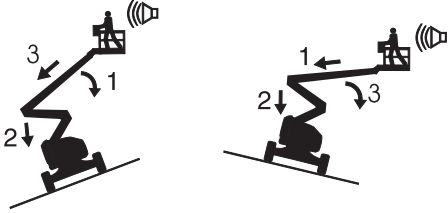
# Symbol and Hazard Pictorials Definitions

 <p>Read the operator's manual</p>	 <p>No smoking No flame Stop engine</p>	 <p>Do not use ether or other high energy starting aids on machines equipped with glow plugs</p>	<p>Recovery procedure if tilt alarm sounds while elevated.</p>  <p>Platform uphill: 1 Lower primary. 2 Lower secondary 3 Retract primary</p> <p>Platform downhill: 1 Retract primary. 2 Lower secondary. 3 Lower primary.</p>
 <p>Lanyard attachment point</p>	 <p>Wheel load</p>		



# General Safety

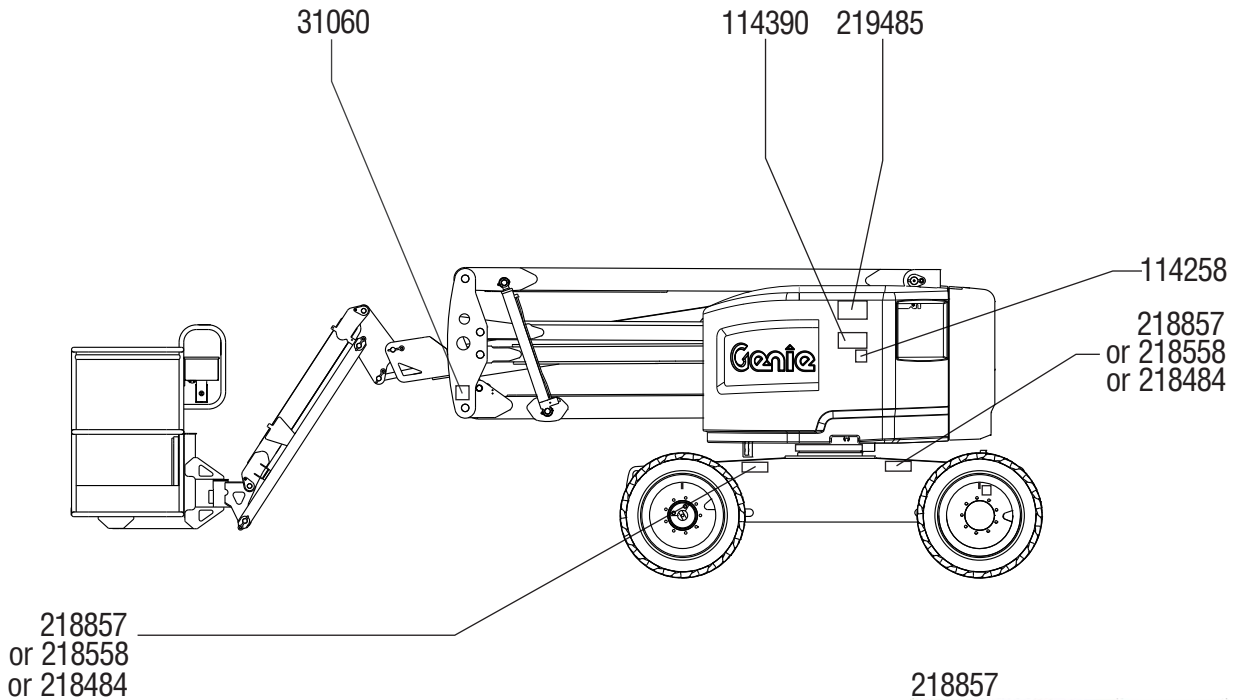

31060

<b>⚠ DANGER</b>	
	<b>Tip-over Hazard</b> Altering or disabling limit switches can result in machine tip-over. Machine tip-over will result in death or serious injury.
	Do not alter or disable limit switch(s).
<small>31060 C</small>	

114390

<b>⚠ DANGER</b>	
	<b>Electrocution Hazard</b> Death or injury can result from contacting electric power lines.  Always contact the electric power line owner. The electric power shall be disconnected or the power lines moved or insulated before machine operations begin.
<small>114390 A</small>	

Maintain required clearance.		
Line Voltage	Required Clearance	
0 to 50KV	10 ft	3.0 m
50 to 200KV	15 ft	4.6 m
200 to 350KV	20 ft	6.1 m
350 to 500KV	25 ft	7.6 m
500 to 750KV	35 ft	10.6 m
750 to 1000KV	45 ft	13.7 m

218857

<b>⚠ DANGER</b>	
	<b>Tip-over Hazard</b> Failure to replace tires with tires of same specification will result in death or serious injury.
	Tires are critical to machine stability. Do not replace original factory-installed tires with tires of different specification or ply rating.
<small>218857 A</small>	

<b>RT Tires</b> Tire size: 315/55020 minimum 12 ply
<b>Air-filled Tire Pressure:</b> 60 psi / 4.1 bar
<b>Wheel Lug Torque</b> Dry: 125 ft-lbs / 169 Nm Lubricated: 94 ft-lbs / 127 Nm

114258

<b>⚠ DANGER</b>	
<b>Burn Hazard</b> Fuel and fumes can explode and burn.	<b>No smoking. No flame. Stop engine.</b>
<small>114258 A</small>	

219485

<b>INSTRUCTIONS</b>		
<b>Operating Instructions</b>		
<b>Starting The Engine</b> Turn key switch to ground control. Be sure both ground and platform red Emergency Stop buttons are pulled out to on position. Gasoline/LPG models: select fuel by moving fuel select switch to desired position. Move start toggle switch to either side.	<b>Emergency Lowering</b> Use emergency lowering only if primary power source (engine) fails. Pull out red Emergency Stop button to on position. Simultaneously hold emergency power switch on and activate desired function.	<b>Check Engine Light</b> Light on and engine stopped: tag machine and remove from service. Light on and engine still running: contact service personnel within 24 hours.
<b>Emergency Stop</b> Push in red Emergency Stop button to stop all functions and turn engine off. Selecting and operating ground controls will override platform red Emergency Stop button.	<b>To Position Platform</b> Simultaneously push and hold function enable button and activate desired function.	<b>After Each Use</b> Be sure the machine is parked on a firm, level surface. Turn key to off position and remove to secure from unauthorized use. Chock wheels.
<small>219485</small>		

218558

<b>⚠ DANGER</b>	
	<b>Tip-over Hazard</b> Failure to replace tires with tires of same specification will result in death or serious injury.
	Tires are critical to machine stability. Do not replace original factory-installed tires with tires of different specification or ply rating.
<small>218558 A</small>	

<b>High-Flotation Tires</b> Tire size: 33"16LL500 minimum 10 ply
<b>Air-filled Tire Pressure:</b> 38 psi / 2.6 bar
<b>Wheel Lug Torque</b> Dry: 125 ft-lbs / 169 Nm Lubricated: 94 ft-lbs / 127 Nm





219484

<b>⚠ DANGER</b>	
	<b>Tip-over Hazard</b> Failure to replace tires with tires of same specification will result in death or serious injury.
	Tires are critical to machine stability. Do not replace original factory-installed tires with tires of different specification or ply rating.
<small>219484 A</small>	

<b>High-Flotation Tires</b> Tire size: 33"16LL500 minimum 10 ply
<b>Air-filled Tire Pressure:</b> 38 psi / 2.6 bar
<b>Wheel Lug Torque</b> Dry: 125 ft-lbs / 169 Nm Lubricated: 94 ft-lbs / 127 Nm

# General Safety





218549

<b>⚠ DANGER</b>	Maximum allowable wind speed: 28 mph / 12.5 m/sec	Maximum Capacity: 500 lbs / 227 kg Occupants and equipment must not exceed 500 lbs / 227 kg Maximum Occupants: 2	Maximum Allowable Manual Force: 150 ft lbs / 667 N
			
<p>Tip-over Hazard Tipping over the machine will result in death or serious injury.</p>			


218559


<b>⚠ DANGER</b>	<b>⚠ WARNING</b>	<b>⚠ WARNING</b>
		
<p>Tip-over Hazard Tipping over the machine will result in death or serious injury.</p>	<p>Drive Direction Hazard Machine can move in opposite direction of joystick movement. Movement in an unplanned direction can result in death or serious injury.</p>	<p>Crush Hazard Contact with overhead obstructions could result in death or serious injury.</p>
<p>Only raise the platform when the machine is on a firm, level surface.</p>	<p>Always match the color-coded direction arrows on platform controls and drive chassis to determine direction of machine travel. Read and understand operator's manual.</p>	<p>Keep away from overhead obstructions or other possible hazards.</p>

218551

<b>⚠ DANGER</b>	Maximum allowable wind speed: 28 mph / 12.5 m/sec	Maximum Capacity: 440 lbs / 200 kg Occupants and equipment must not exceed 440 lbs / 200 kg Maximum Occupants: 2	Maximum Allowable Manual Force: 150 ft lbs / 667 N
			
<p>Tip-over Hazard Tipping over the machine will result in death or serious injury.</p>			

114390

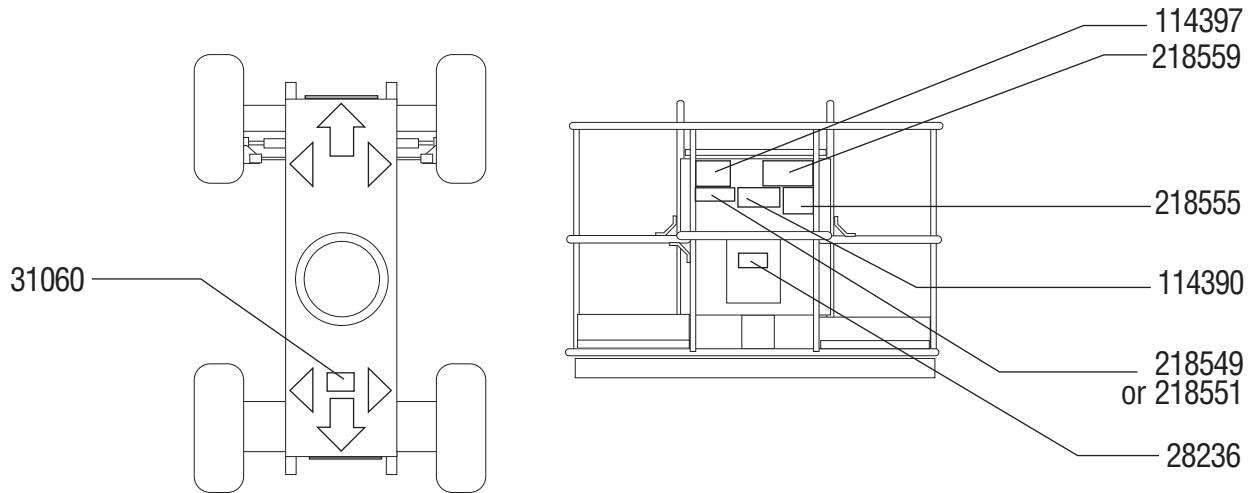

<b>⚠ DANGER</b>															
<p>Electrocution Hazard Death or injury can result from contacting electric power lines. Always contact the electric power line owner. The electric power shall be disconnected or the power lines must be insulated before machine operations begin.</p>															
<table border="1"> <thead> <tr> <th>Line Voltage</th> <th>Required Clearance</th> </tr> </thead> <tbody> <tr> <td>0 to 300V</td> <td>10 ft / 3.0 m</td> </tr> <tr> <td>30 to 2000V</td> <td>15 ft / 4.6 m</td> </tr> <tr> <td>200 to 5000V</td> <td>20 ft / 6.1 m</td> </tr> <tr> <td>500 to 10000V</td> <td>25 ft / 7.6 m</td> </tr> <tr> <td>100 to 75000V</td> <td>30 ft / 9.1 m</td> </tr> <tr> <td>750 to 100000V</td> <td>40 ft / 12.2 m</td> </tr> </tbody> </table>		Line Voltage	Required Clearance	0 to 300V	10 ft / 3.0 m	30 to 2000V	15 ft / 4.6 m	200 to 5000V	20 ft / 6.1 m	500 to 10000V	25 ft / 7.6 m	100 to 75000V	30 ft / 9.1 m	750 to 100000V	40 ft / 12.2 m
Line Voltage	Required Clearance														
0 to 300V	10 ft / 3.0 m														
30 to 2000V	15 ft / 4.6 m														
200 to 5000V	20 ft / 6.1 m														
500 to 10000V	25 ft / 7.6 m														
100 to 75000V	30 ft / 9.1 m														
750 to 100000V	40 ft / 12.2 m														



31060

<b>⚠ DANGER</b>	<p>Tip-over Hazard Altering or disabling limit switches can result in machine tip-over. Machine tip-over will result in death or serious injury.</p>
	<p>Do not alter or disable limit switch(es).</p>


114397

<b>⚠ DANGER</b>	
<p>• Stop all movement.</p>	
	<p>Platform uphill: 1 Lower primary boom. 2 Lower secondary boom. 3 Retract primary boom.</p>
<p>• Read operator's manual before attempting to move machine.</p>	
<p>Platform downhill: 1 Retract primary boom. 2 Lower secondary boom. 3 Lower primary boom.</p>	

218555

<b>⚠ WARNING</b>																	
<p>Driving on a Slope Do not drive machine on a slope that exceeds maximum uphill, downhill or side slope rating. Determine slope and side slope ratings for machine and determine slope grade.</p>																	
<table border="1"> <thead> <tr> <th>Configuration</th> <th>Uphill</th> <th>Downhill</th> <th>Side Slope</th> </tr> </thead> <tbody> <tr> <td>200</td> <td>20% (1:5)</td> <td>10% (1:10)</td> <td>10% (1:10)</td> </tr> <tr> <td>400</td> <td>20% (1:5)</td> <td>10% (1:10)</td> <td>10% (1:10)</td> </tr> <tr> <td>600</td> <td>20% (1:5)</td> <td>10% (1:10)</td> <td>10% (1:10)</td> </tr> </tbody> </table>		Configuration	Uphill	Downhill	Side Slope	200	20% (1:5)	10% (1:10)	10% (1:10)	400	20% (1:5)	10% (1:10)	10% (1:10)	600	20% (1:5)	10% (1:10)	10% (1:10)
Configuration	Uphill	Downhill	Side Slope														
200	20% (1:5)	10% (1:10)	10% (1:10)														
400	20% (1:5)	10% (1:10)	10% (1:10)														
600	20% (1:5)	10% (1:10)	10% (1:10)														
<p>Runaway Hazard Machine movement can occur when machine is operated on a slope that exceeds rated uphill, downhill or side slope rating. A runaway machine could result in death or serious injury.</p>																	
<p>Note: Slope rating is subject to ground conditions and adequate traction. Gradability applies to platform-downhill configuration only. The axis boom is between horizontal and platform is between non-steer wheels.</p>																	
<p>Move drive speed select switch to machine on incline symbol.</p>																	

28236

<b>⚠ WARNING</b>	
<p>Read and understand Operator's Manual, Responsibilities Manual and Safety Manual and all safety signs before using or maintaining machine. If you do not understand the information in the manuals, consult your supervisor, the owner or the manufacturer.</p>	
<p>Improper operation or maintenance can result in serious injury or death.</p>	

# General Safety

114390

<b>⚠ DANGER</b>																						
<p><b>Electrocution Hazard</b> Death or injury can result from contacting electric power lines. Always contact the electric power line owner. The electric power shall be disconnected or the power lines moved or insulated before machine operations begin.</p>																						
<p>Maintain required clearance.</p> <table border="1"> <thead> <tr> <th>Line Voltage</th> <th colspan="2">Required Clearance</th> </tr> </thead> <tbody> <tr> <td>0 to 50KV</td> <td>10 ft</td> <td>3.0 m</td> </tr> <tr> <td>50 to 200KV</td> <td>15 ft</td> <td>4.6 m</td> </tr> <tr> <td>200 to 350KV</td> <td>20 ft</td> <td>6.1 m</td> </tr> <tr> <td>350 to 500KV</td> <td>25 ft</td> <td>7.6 m</td> </tr> <tr> <td>500 to 750KV</td> <td>35 ft</td> <td>10.6 m</td> </tr> <tr> <td>750 to 1000KV</td> <td>45 ft</td> <td>13.7 m</td> </tr> </tbody> </table>		Line Voltage	Required Clearance		0 to 50KV	10 ft	3.0 m	50 to 200KV	15 ft	4.6 m	200 to 350KV	20 ft	6.1 m	350 to 500KV	25 ft	7.6 m	500 to 750KV	35 ft	10.6 m	750 to 1000KV	45 ft	13.7 m
Line Voltage	Required Clearance																					
0 to 50KV	10 ft	3.0 m																				
50 to 200KV	15 ft	4.6 m																				
200 to 350KV	20 ft	6.1 m																				
350 to 500KV	25 ft	7.6 m																				
500 to 750KV	35 ft	10.6 m																				
750 to 1000KV	45 ft	13.7 m																				
114390 A																						

31060

<b>⚠ DANGER</b>	
	<p><b>Tip-over Hazard</b> Altering or disabling limit switches can result in machine tip-over. Machine tip-over will result in death or serious injury.</p>
	<p>Do not alter or disable limit switch(s).</p>
31060 C	

218857

<b>⚠ DANGER</b>	
	<p><b>Tip-over Hazard</b> Failure to replace tires with tires of same specification will result in death or serious injury.</p>
	<p>Tires are critical to machine stability. Do not replace original factory-installed tires with tires of different specification or ply rating.</p>
<p><b>RT Tires</b> Tire size: 315/55D20 minimum 12 ply <b>Air-filled Tire Pressure:</b> 60 psi / 4.1 bar <b>Wheel Lug Torque</b> Dry: 125 ft-lbs / 169 Nm Lubricated: 94 ft-lbs / 127 Nm</p>	
218857 A	

218558

<b>⚠ DANGER</b>	
	<p><b>Tip-over Hazard</b> Failure to replace tires with tires of same specification will result in death or serious injury.</p>
	<p>Tires are critical to machine stability. Do not replace original factory-installed tires with tires of different specification or ply rating.</p>
<p><b>High-Flotation Tires</b> Tire size: 33/16LL500 minimum 10 ply <b>Air-filled Tire Pressure:</b> 38 psi / 2.6 bar <b>Wheel Lug Torque</b> Dry: 125 ft-lbs / 169 Nm Lubricated: 94 ft-lbs / 127 Nm</p>	
218558 A	

219484

<b>⚠ DANGER</b>	
	<p><b>Tip-over Hazard</b> Do not use air-filled tires.</p>
	<p>This machine is equipped with foam-filled tires. Wheel weight and proper counterweight configuration are critical to stability.</p>
<p><b>RT Tires</b> Tire size: 315/55D20 minimum 12 ply <b>Foam-Filled Tire, Minimum New Weight:</b> 290 lbs / 131 kg <b>Wheel Lug Torque</b> Dry: 125 ft-lbs / 169 Nm Lubricated: 94 ft-lbs / 127 Nm</p>	
219484 A	

31788


<b>⚠ DANGER</b>	
	<p><b>Explosion / Burn Hazard</b> Ignition of explosive gases or contact with corrosive acid will cause death, burns or blindness.</p>
	<p>Keep all open flames and sparks away. Wear personal protective equipment, including face shield, gloves and long sleeve shirt.</p>
	<p><b>READ MANUALS</b> Read all manuals prior to operation. <b>DO NOT OPERATE</b> equipment if you do not understand the information in the manuals. Consult your supervisor, the owner or the manufacturer.</p>
31788 C	

28175


<b>⚠ WARNING</b>	
<p><b>Compartment access is restricted.</b> Contact with components under any cover may result in serious injury.</p>	<p>Only trained maintenance personnel should access compartments. Access by operator is only advised when performing Pre-operation Inspection. All compartments must remain closed and secured during operation.</p>
28175 H	

97602

<b>⚠ WARNING</b>	
<p><b>Explosion Hazard</b> Death or serious injury can result from the use of either or other high energy starting aids.</p>	<p>Do not use either or other high energy starting aids on machines equipped with glow plugs or grid heater.</p>
97602 C	

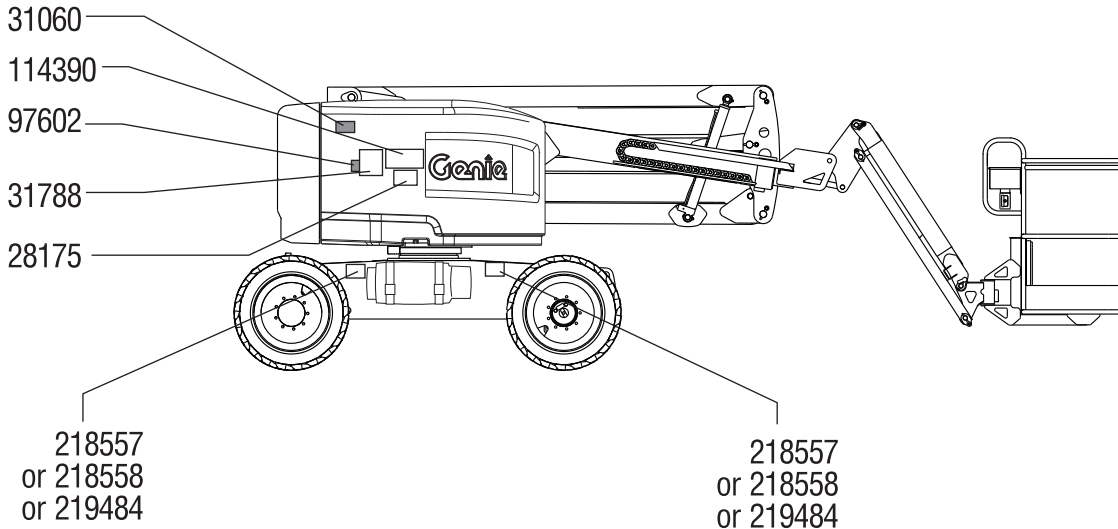


# General Safety

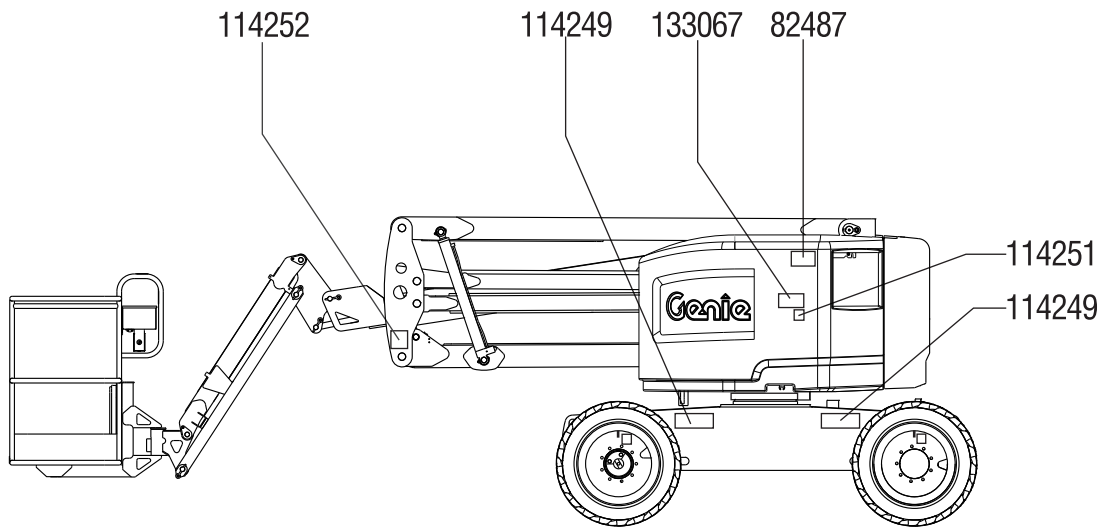

133067



114252

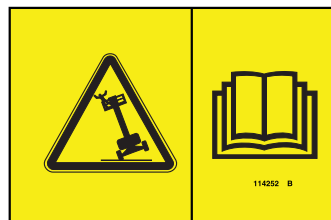


82487





114251



114249

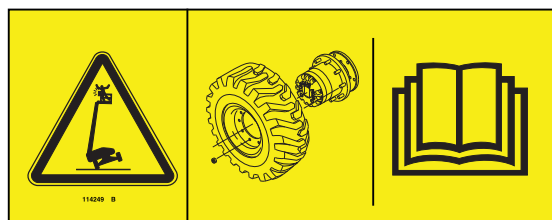

# General Safety

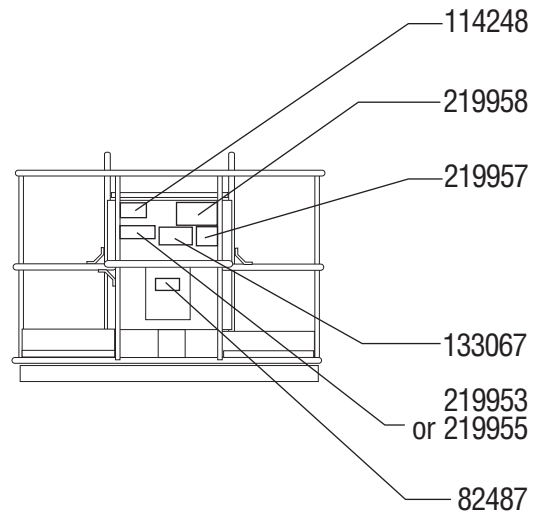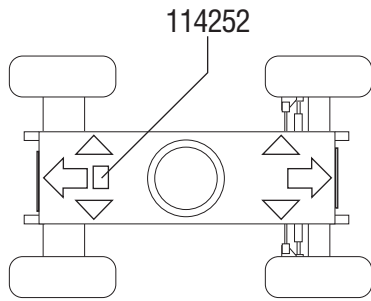

219958



133067



219953



114248



219955



219957



82487




114252




# General Safety


114252

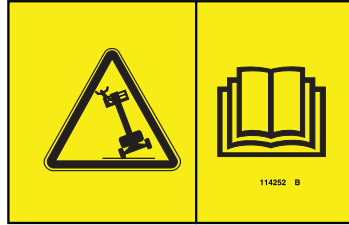


133067

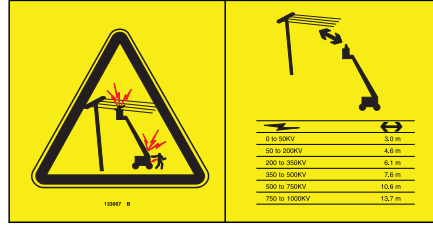


82473

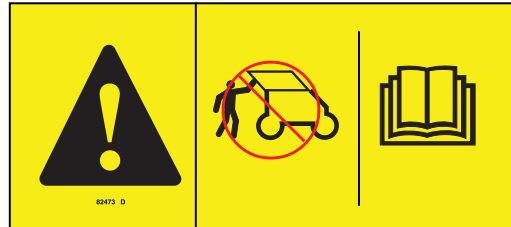

114249

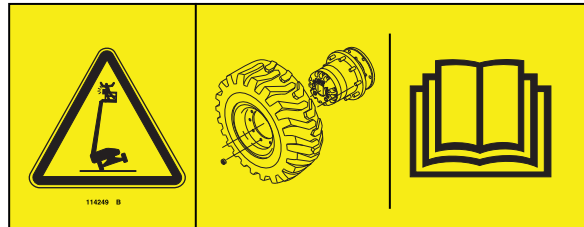

82481

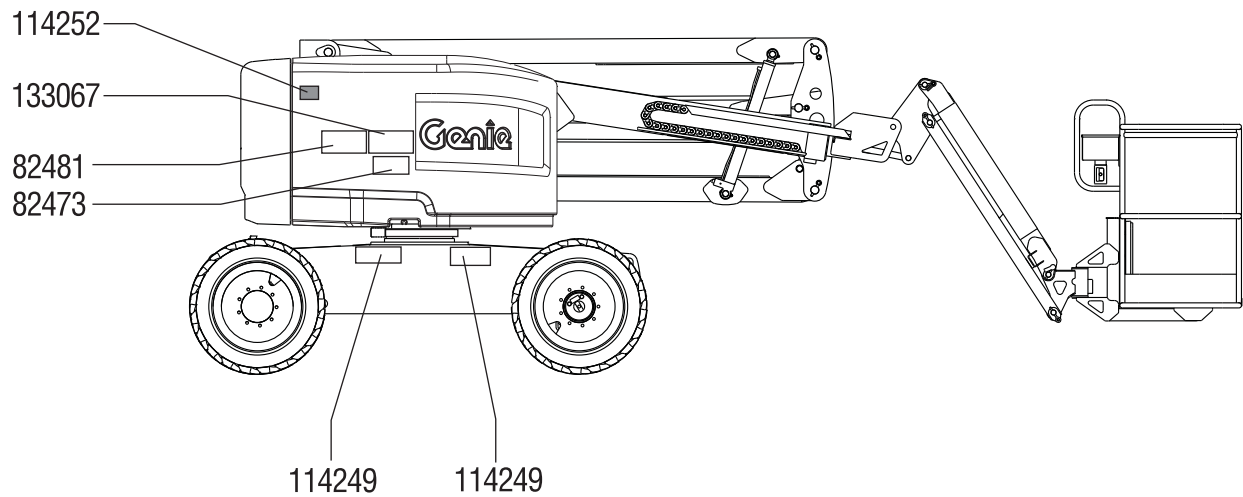

---

# Personal Safety

## Personal Fall Protection

Personal fall protection equipment (PFPE) is required when operating this machine.

Occupants must wear a safety belt or harness in accordance with governmental regulations. Attach the lanyard to the anchor provided in the platform.

Operators must comply with employer, job site and governmental rules regarding the use of personal protective equipment.

All PFPE must comply with applicable governmental regulations, and must be inspected and used in accordance with the PFPE manufacturer's instructions.

## Work Area Safety

### ⚠ Electrocuting Hazards

This machine is not electrically insulated and will not provide protection from contact with or proximity to electrical current.



Obey all local and governmental regulations regarding required clearance from electrical power lines. At a minimum, the required clearance contained in the chart below must be followed.

Line Voltage	Required Clearance	
0 to 50KV	10 ft	3.05 m
50 to 200KV	15 ft	4.60 m
200 to 350KV	20 ft	6.10 m
350 to 500KV	25 ft	7.62 m
500 to 750KV	35 ft	10.67 m
750 to 1000KV	45 ft	13.72 m

Allow for platform movement, electrical line sway or sag, and beware of strong or gusty winds.



Keep away from the machine if it contacts energized power lines. Personnel on the ground or in the platform must not touch or operate the machine until energized power lines are shut off.

Do not operate the machine during lightning or storms.

Do not use the machine as a ground for welding.


### ⚠ Tip-over Hazards

Occupants, equipment and materials shall not exceed the maximum platform capacity or the maximum platform capacity of the platform extension.

<b>Maximum platform capacity</b>	500 lbs	227 kg
<b>Maximum occupants</b>	2	
<b>Maximum capacity Machine equipped with Aircraft Protection Package</b>	440 lbs	200 kg

The weight of options and accessories, such as pipe cradles, panel cradles and welders, will reduce the rated platform capacity and must be subtracted from the platform capacity. See the decals with the options and accessories.

If using accessories, read, understand and obey the decals, instructions and manuals with the accessory.

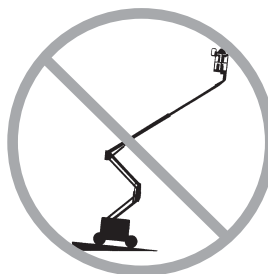

Do not raise or extend the boom unless the machine is on a firm, level surface.






## Work Area Safety

Do not depend on the tilt alarm as a level indicator. The tilt alarm sounds in the platform only when the machine is on a severe slope.


If the tilt alarm sounds while the boom is lowered: Do not extend, rotate or raise the boom above horizontal. Move the machine to a firm, level surface before raising the platform.

If the tilt alarm sounds when the platform is raised, use extreme caution. Identify the condition of the boom on the slope as shown below. Follow the steps to lower the boom before moving to a firm, level surface. Do not rotate the boom while lowering.

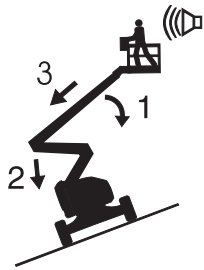


If the tilt alarm sounds with the platform uphill:

- 1 Lower the primary boom.
- 2 Lower the secondary boom.
- 3 Retract the primary boom.

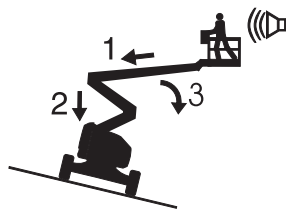

If the tilt alarm sounds with the platform downhill:

- 1 Retract the primary boom.
- 2 Lower the secondary boom.
- 3 Lower the primary boom.

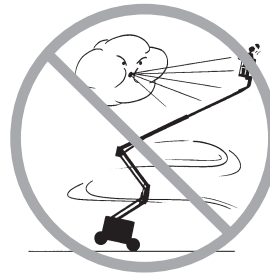

Do not raise the boom when wind speeds may exceed 28 mph / 12.5 m/s. If wind speeds exceed 28 mph / 12.5 m/s when the boom is raised, lower the boom and do not continue to operate the machine.

Do not operate the machine in strong or gusty winds. Do not increase the surface area of the platform or the load. Increasing the area exposed to the wind will decrease machine stability.



Use extreme care and slow speeds while driving the machine in the stowed position across uneven terrain, debris, unstable or slippery surfaces and near holes and drop-offs.

Do not drive the machine on or near uneven terrain, unstable surfaces or other hazardous conditions with the boom raised or extended.

Do not use the machine as a crane.

Do not push the machine or other objects with the boom.

Do not contact adjacent structures with the boom.

## Work Area Safety

Do not tie the boom or platform to adjacent structures.

Do not place loads outside the platform perimeter.



Do not push off or pull toward any object outside of the platform.

**Maximum allowable side force – ANSI & CSA**  
150 lbs / 667 N

Do not alter or disable machine components that in any way affect safety and stability.

Do not replace items critical to machine stability with items of different weight or specification.

Do not replace factory-installed tires with tires of different specification or ply rating.

**Z-45/25J models equipped with Aircraft Protection Package:** Do not use air-filled tires. These machines are equipped with foam-filled tires. Wheel weight is critical to stability.

Do not modify or alter an aerial work platform without prior written permission from the manufacturer. Mounting attachments for holding tools or other materials onto the platform, toeboards or guard rail system can increase the weight in the platform and the surface area of the platform or the load.



Do not place or attach fixed or overhanging loads to any part of this machine.



Do not place ladders or scaffolds in the platform or against any part of this machine.

Do not transport tools and materials unless they are evenly distributed and can be safely handled by person(s) in the platform.

Do not use the machine on a moving or mobile surface or vehicle.

Be sure all tires are in good condition, air-filled tires are properly inflated and lug nuts are properly tightened.

Do not use the platform controls to free a platform that is caught, snagged or otherwise prevented from normal motion by an adjacent structure. All personnel must be removed from the platform before attempting to free the platform using the ground controls.

## Work Area Safety

### ⚠️ Operation on Slopes Hazards

Do not drive the machine on a slope that exceeds the maximum uphill, downhill or side slope rating of the machine. Slope rating applies only to machines in the stowed position.

Maximum slope rating, stowed position, 2WD		
Platform downhill	30%	(17°)
Platform uphill	25%	(14°)
Side slope	25%	(14°)
Maximum slope rating, stowed position, 4WD		
Platform downhill	45%	(24°)
Platform uphill	25%	(14°)
Side slope	25%	(14°)

Note: Slope rating is subject to ground conditions and adequate traction. See Driving on a Slope in the Operating Instructions section.

### ⚠️ Fall Hazards



Occupants must wear a safety belt or harness in accordance with governmental regulations. Attach the lanyard to the anchor provided in the platform.



Do not sit, stand or climb on the platform guard rails. Maintain a firm footing on the platform floor at all times.



Do not climb down from the platform when raised.


Keep the platform floor clear of debris.

Lower the platform entry mid-rail or close the entry gate before operating.

Do not enter or exit the platform unless the machine is in the stowed position and the platform is at ground level.

# Work Area Safety

## ⚠ Collision Hazards

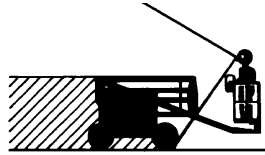

Be aware of limited sight distance and blind spots when driving or operating.

Be aware of the boom position and tailswing when rotating the turntable.



Check the work area for overhead obstructions or other possible hazards.




Be aware of crushing hazards when grasping the platform guard rail.

Operators must comply with employer, job site and governmental rules regarding use of personal protective equipment.

Observe and use the color-coded direction arrows on the platform controls and drive chassis for drive and steer functions.



Do not lower the boom unless the area below is clear of personnel and obstructions.

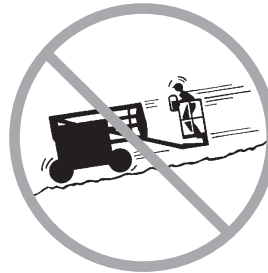

Limit travel speed according to the condition of the ground surface, congestion, slope, location of personnel, and any other factors which may cause collision.

Do not operate a boom in the path of any crane unless the controls of the crane have been locked out and/or precautions have been taken to prevent any potential collision.

No stunt driving or horseplay while operating a machine.

## Work Area Safety

### ▲ Bodily Injury Hazard

Always operate the machine in a well-ventilated area to avoid carbon monoxide poisoning.

Do not operate the machine with a hydraulic oil or air leak. An air leak or hydraulic leak can penetrate and/or burn skin.

Improper contact with components under any cover will cause serious injury. Only trained maintenance personnel should access compartments. Access by the operator is only advised when performing a pre-operation inspection. All compartments must remain closed and secured during operation.

### ▲ Explosion and Fire Hazards

Do not start the engine if you smell or detect liquid petroleum gas (LPG), gasoline, diesel fuel or other explosive substances.

Do not refuel the machine with the engine running.

Refuel the machine and charge the battery only in an open, well-ventilated area away from sparks, flames and lighted tobacco.

Do not operate the machine or charge the battery in hazardous locations or locations where potentially flammable or explosive gases or particles may be present.

Do not spray ether into engines equipped with glow plugs.

### ▲ Damaged Machine Hazards

Do not use a damaged or malfunctioning machine.

Conduct a thorough pre-operation inspection of the machine and test all functions before each work shift. Immediately tag and remove from service a damaged or malfunctioning machine.

Be sure all maintenance has been performed as specified in this manual and the appropriate Genie service manual.

Be sure all decals are in place and legible.

Be sure the operator's, safety and responsibilities manuals are complete, legible and in the storage container located on the platform.

### ▲ Component Damage Hazards

Do not use any battery or charger greater than 12V to jump-start the engine.

Do not use the machine as a ground for welding.

Do not operate the machine in locations where extremely high magnetic fields may be present.

## Work Area Safety

### ⚠ Battery Safety

#### Burn Hazards



Batteries contain acid. Always wear protective clothing and eye wear when working with batteries.

Avoid spilling or contacting battery acid. Neutralize battery acid spills with baking soda and water.

#### Explosion Hazards



Keep sparks, flames and lighted tobacco away from batteries. Batteries emit explosive gas.

### Lockout After Each Use

- 1 Select a safe parking location—firm level surface, clear of obstruction and traffic.
- 2 Retract and lower the boom to the stowed position.
- 3 Rotate the turntable so that the boom is between the non-steer wheels.
- 4 Turn the key switch to the off position and remove the key to secure from unauthorized use.
- 5 Chock the wheels.

### ⚠ Electrocutation Hazard

Avoid contact with electrical terminals.

## Work Area Safety

### ▲ Panel Cradle Safety

Read, understand and obey all warnings and instructions provided with the panel cradles.

Do not exceed the rated platform capacity. The combined weight of the cradles, panels, occupants, tools and any other equipment must not exceed rated capacity.

The panel cradle assembly weighs 30 lbs / 13.6 kg.

The maximum capacity of the panel cradles is 250 lbs / 113 kg.

The weight of the panel cradles and the load in the panel cradles may limit the maximum number of occupants in platform to one person.

Secure the cradles to the platform. Secure the panel(s) to the platform railing using the straps provided.

Do not operate unless you are adequately instructed and are aware of all hazards associated with lifting panels.

Do not cause a horizontal force or side load to machine by raising or lowering a fixed or overhanging load.

Maximum vertical height of panels: 4 ft / 1.2 m

Maximum wind speed: 15 mph / 6.7 m/sec

Maximum panel area: 32 sq ft / 3 m<sup>2</sup>

### ▲ Pipe Cradle Safety

Read, understand and obey all warnings and instructions provided with the pipe cradles.

Do not exceed the rated platform capacity. The pipe cradle assembly and the weight in the pipe cradles will reduce rated platform capacity and must be factored into total platform load.

The pipe cradle assembly weighs 21 lbs / 9.5 kg.

The maximum capacity of the pipe cradle assembly is 200 lbs / 91 kg.

The weight of the pipe cradle assembly and the load in the pipe cradles may limit the maximum number of occupants in platform.

Center the load within the perimeter of the platform.

Secure the load to the platform.

Do not obstruct the entrance or the exit of the platform.


Do not obstruct the ability to operate the platform controls or the red Emergency Stop button.

Do not operate unless you are adequately instructed and are aware of all of the hazards associated with movement of the platform with an overhanging load.

Do not cause a horizontal force or side load to machine by raising or lowering a fixed or overhanging load.

**Electrocution Hazard:** Keep pipes away from all energized electrical conductors.

# Legend

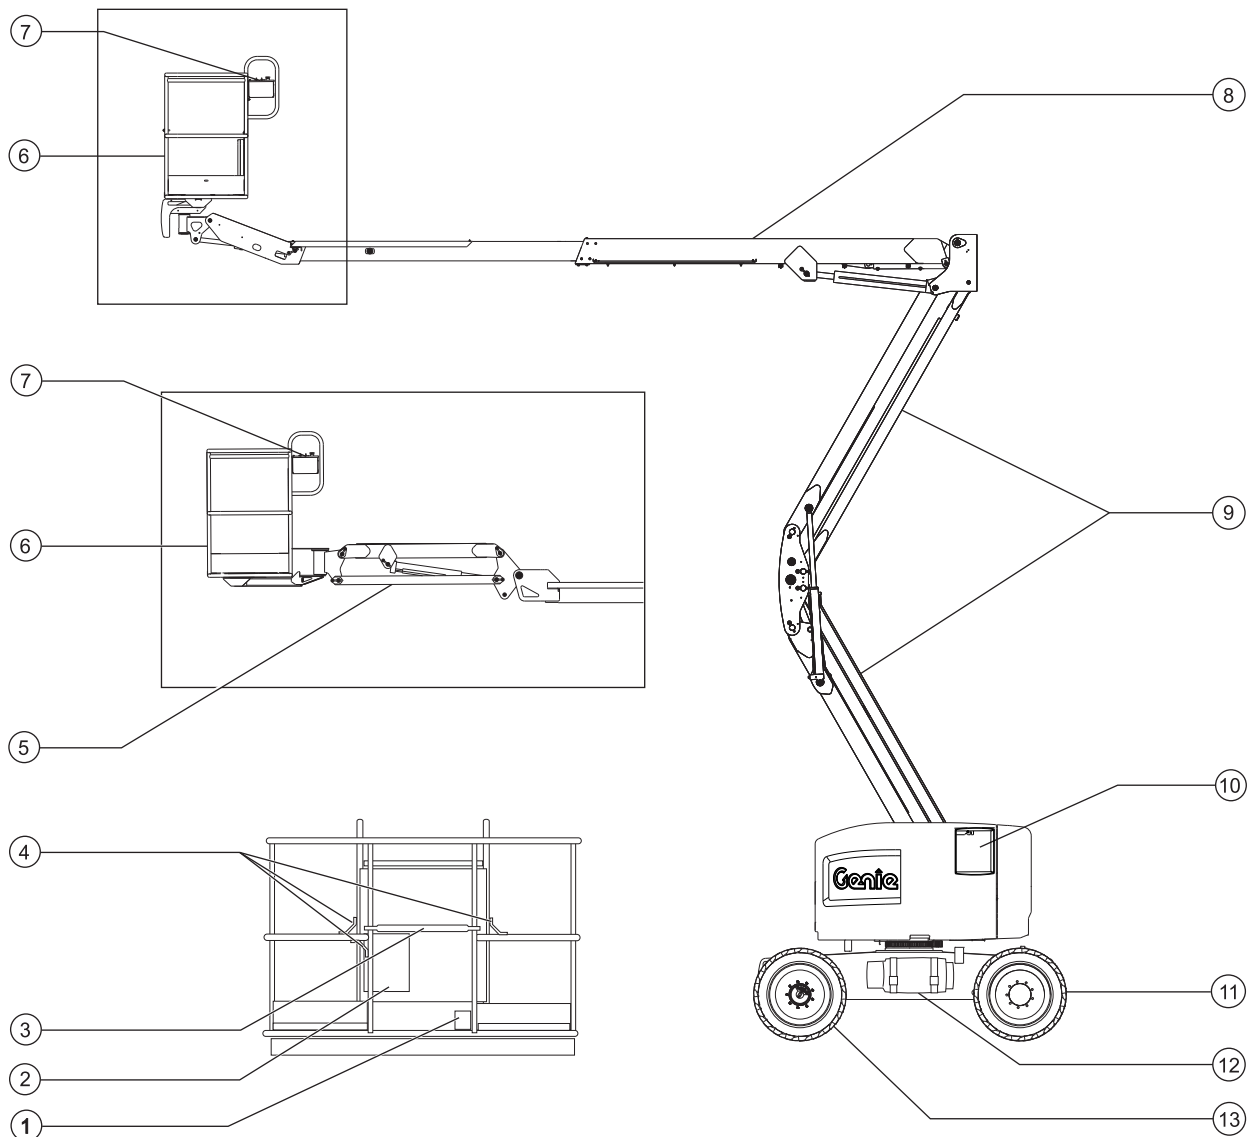



- 1 Foot switch
- 2 Manual storage container
- 3 Sliding mid-rail
- 4 Lanyard anchorage point
- 5 Jib boom (Z-45/25J)
- 6 Platform
- 7 Platform controls

- 8 Primary boom
- 9 Secondary boom
- 10 Ground controls
- 11 Steer tire
- 12 LPG tank (if equipped)
- 13 Non-steer tire



# Controls

The Z-45/25 and Z-45/25J machines will have one of these two styles of ground control panels. The descriptions in this section and the instructions in the Function Test and Operating Instructions apply to both panels, unless specifically noted.

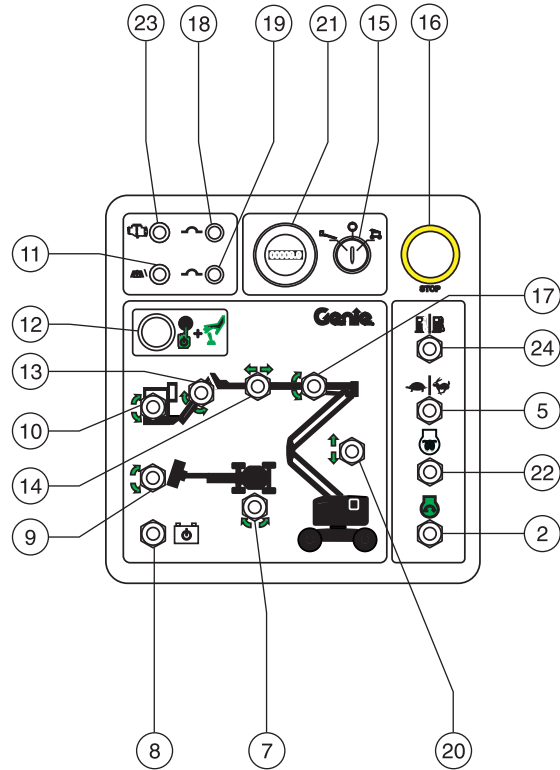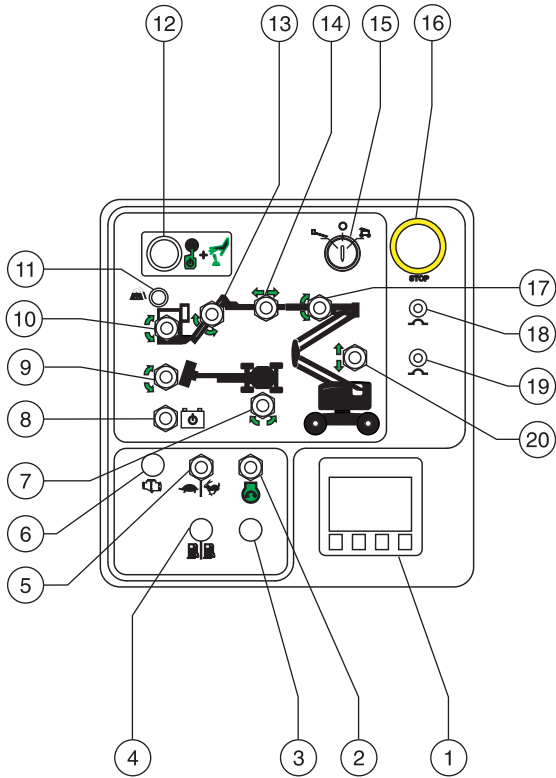


## Controls

- 1 LCD readout screen  
Screen displays hour meter, voltage, oil pressure and coolant temperature. Screen also displays fault codes and other service information.
- 2 Engine start switch  
Move the engine start switch to either side to start the engine.
- 3 Not used
- 4 Not used
- 5 Engine idle (rpm) select switch  
Move the engine idle select switch to the turtle position for foot switch activated low idle. Move the engine idle select switch to the rabbit position for foot switch activated high idle.
- 6 Not used
- 7 Turntable rotate switch  
Move the turntable rotate switch to the right and the turntable will rotate to the right. Move the turntable rotate switch to the left and the turntable will rotate to the left.
- 8 Emergency lowering switch  
Use emergency power if the primary power source (engine) fails. Simultaneously hold the emergency power switch to either side and activate the desired function.
- 9 Platform rotate switch  
Move the platform rotate switch to the right and the platform will rotate to the right. Move the platform rotate switch to the left and the platform will rotate to the left.
- 10 Platform level switch  
Move the platform level switch up and the level of the platform will raise. Move the platform level switch down and the level of the platform will lower.
- 11 Not used
- 12 Function enable button  
Press and hold the function enable button to enable the functions on the ground control panel to operate.
- 13 Jib boom up/down switch  
Move the jib boom switch up and the jib boom will raise. Move the jib boom switch down and the jib boom will lower.
- 14 Primary boom extend/retract switch  
Move the primary boom extend/retract switch to the right and the primary boom will retract. Move the boom extend/retract switch to the left and the primary boom will extend.

## Controls

- 15 Key switch for platform/off/ground selection  
Turn the key switch to the platform position and the platform controls will operate. Turn the key switch to the off position and the machine will be off. Turn the key switch to the ground position and the ground controls will operate.
- 16 Red Emergency Stop button  
Push in the red Emergency Stop button to the off position to stop all functions and turn the engine off. Pull out the red Emergency Stop button to the on position to operate the machine.
- 17 Primary boom up/down switch  
Move the primary boom up/down switch up and the boom will raise. Move the primary boom up/down switch down and the boom will lower.
- 18 15A breaker for engine electrical circuits
- 19 15A breaker for control electrical circuits
- 20 Secondary boom up/down switch  
Move the secondary boom up/down switch up and the secondary boom will raise. Move secondary boom up/down switch down and the secondary boom will lower.
- 21 Hour meter  
The hour meter displays the number of hours the machine has operated.
- 22 Deutz Diesel Models: Glow plug switch (if equipped)  
Move the glow plug switch to either side and hold for 3 to 5 seconds.  
Perkins Models: Glow plug indicator light.
- 23 Gasoline/LPG models: Check engine light  
Diesel models: Oil pressure light  
Light on and engine stopped: Tag the machine and remove from service.  
Light on and engine still running: Contact service personnel within 24 hours.
- 24 Gasoline/LPG models: Fuel select switch  
Move the fuel select switch to the gasoline position to select gasoline. Move the fuel select switch to the LPG position to select LPG.


# Controls

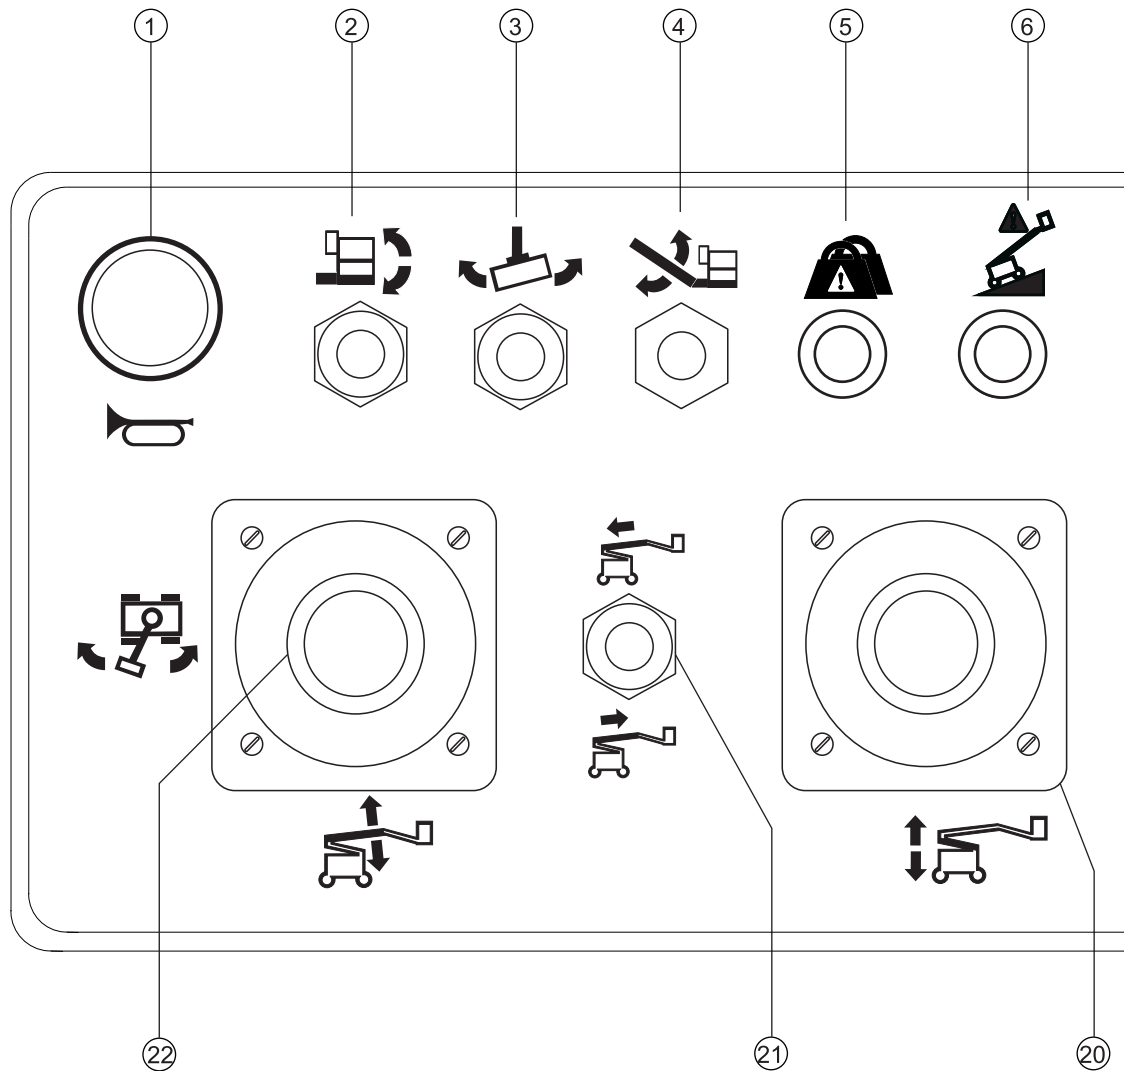

## Platform Control Panel

- |   |                                       |    |   |
|---|---------------------------------------|----|---|
| 1 | Horn button                           | 9  | Platform control box heater (if equipped)   |
| 2 | Platform level switch                 | 10 | Generator switch (if equipped)  |
| 3 | Platform rotate switch                | 11 | Aircraft protection override switch (if equipped)   |
| 4 | Jib boom up/down switch (if equipped) | 12 | Red Emergency Stop button   |
| 5 | Not used                              | 13 | Dual axis proportional control handle for boom up/down and turntable rotate left/right functions<br>OR Proportional control handle for drive function and thumb rocker for steer function |
| 6 | Machine not level indicator light     |    |   |
| 7 | Emergency lowering switch             |    |   |
| 8 | Drive speed select switch             |    |   |

# Controls

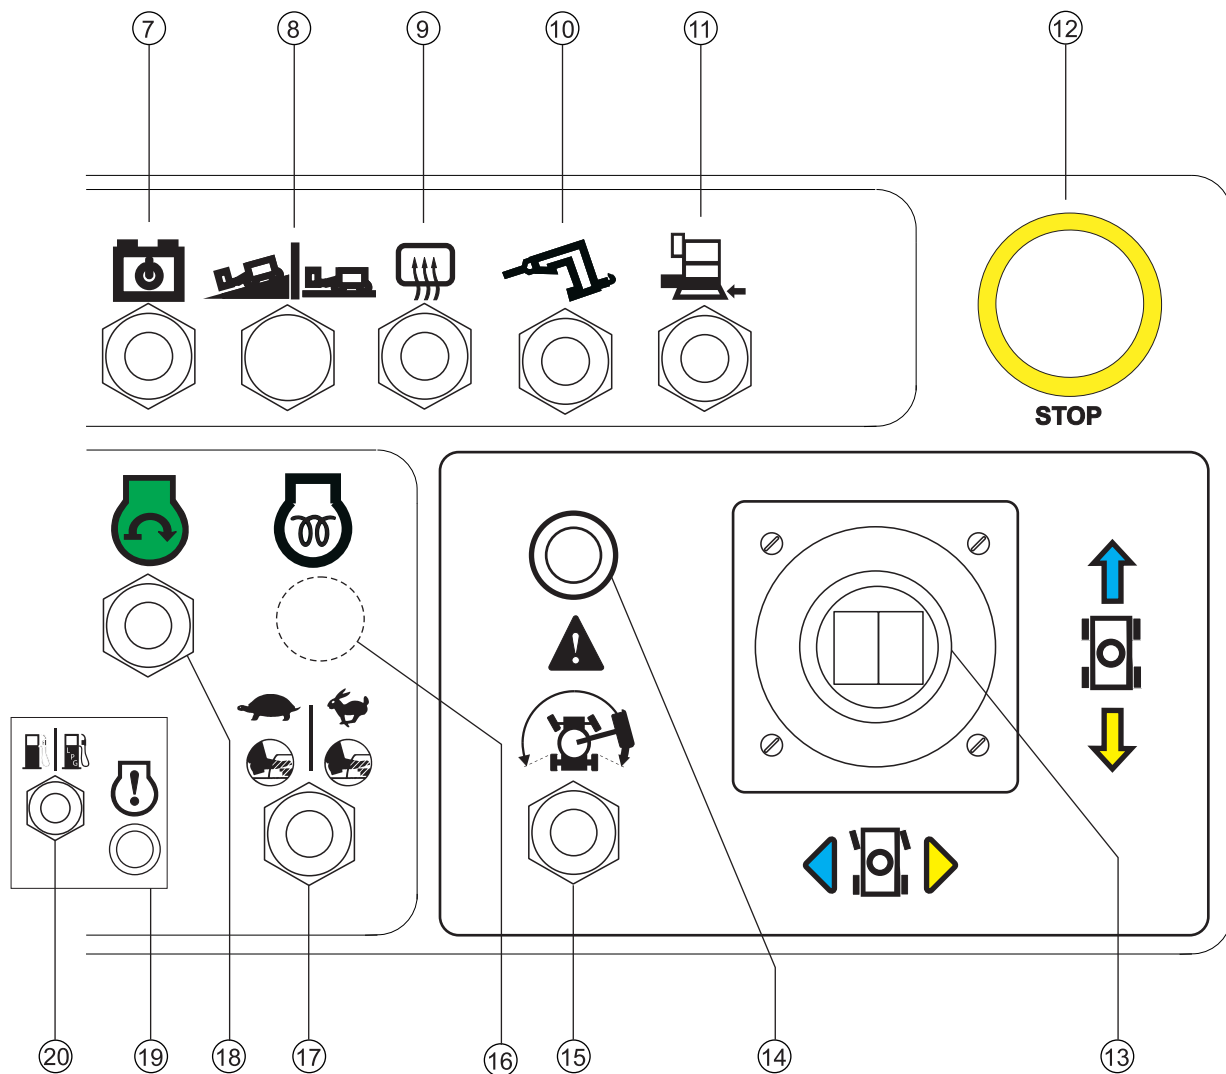

- 14 Drive enable indicator light
- 15 Drive enable switch
- 16 Diesel models: automatic glow plug light or glow plug switch
- 17 Engine idle (rpm) select switch  
Turtle: foot switch activated low idle  
Rabbit: foot switch activated high idle
- 18 Engine start switch
- 19 Models with LCD screen: Engine shut down indicator light
- 20 Gasoline/LPG models: fuel select switch
- 21 Proportional control handle for secondary boom up/down function
- 22 Primary boom extend/retract switch
- 23 Dual axis proportional control handle for boom up/down and turntable rotate left/right functions

# Controls

## Platform Control Panel

### 1 Horn button

Press this button and the horn will sound. Release the button and the horn will stop.


### 2 Platform level switch

Move the platform level switch up and the level of the platform will raise. Move the platform level switch down and the level of the platform will lower.



### 3 Platform rotate switch

Move the platform rotate switch to the right and the platform will rotate to the right. Move the platform rotate switch to the left and the platform will rotate to the left.



### 4 Jib boom up/down switch

Move the jib boom switch up and the jib boom will raise. Move the jib boom switch down and the jib boom will lower.



### 5 Not used

### 6 Machine not level indicator light

The machine not level indicator light will come on when the tilt alarm sounds.

### 7 Emergency lowering switch

Use emergency power if the primary power source (engine) fails. Simultaneously hold the emergency power switch to either side and activate the desired function.

### 8 Drive speed select switch

Machine on incline symbol: Low range operation for inclines.

Machine on level surface symbol: High range operation for maximum drive speed.

### 9 Platform control box heater (if equipped)

Move the heater switch up to turn on the platform control box heater. Move the heater switch down to turn off the platform control box heater.

### 10 Generator switch (if equipped)

Move the generator switch up to activate the generator. Move the switch down to turn off the generator.

### 11 Aircraft protection override switch (if equipped)

Move and hold the aircraft protection override switch to operate the machine when the platform bumper is against an object.

## Controls

### 12 Red Emergency Stop button

Push in the red Emergency Stop button to the off position to stop all functions and turn the engine off. Pull out the red Emergency Stop button to the on position to operate the machine.

### 13 Dual axis proportional control handle for drive and steer functions

OR Proportional control handle for drive function and thumb rocker for steer function.

Move the control handle in the direction indicated by the blue arrow on the control panel and the machine will drive forward. Move the control handle in the direction indicated by the yellow arrow and the machine will drive backwards. Move the control handle in the direction indicated by the blue triangle and the machine will steer to the left. Move the control handle in the direction indicated by the yellow triangle and the machine will steer to the right.

OR

Move the control handle in the direction indicated by the blue arrow on the control panel and the machine will drive forward. Move the control handle in the direction indicated by the yellow arrow and the machine will drive backwards. Press the left side of the thumb rocker and the machine will steer to the left. Press the right side of the thumb rocker and the machine will steer to the right.

### 14 Drive enable indicator light

Light on indicates that the boom has moved just past either non-steer wheel and drive function has been interrupted.

### 15 Drive enable switch

To drive when the drive enable light is on, hold the drive enable switch to either side and slowly move the drive control handle off center. Be aware that the machine may move in the opposite direction that the drive and steer controls are moved.

### 16 Diesel models: Glow plug switch

Move the glow plug switch to either side and hold for 3 to 5 seconds.

Or for models with LCD readout screen, light on indicates that glow plugs are on. Start engine when light goes off.

### 17 Engine idle (rpm) select switch

Move the engine idle select switch to the turtle position for foot switch activated low idle. Move the engine idle select switch to the rabbit position for foot switch activated high idle.

### 18 Engine start switch

Move the engine start switch to either side to start the engine.

### 19 Models with LCD screen: Engine shut-down indicator light

Light on indicates that the engine has shut down. Contact service personnel.

## Controls

### 20 Gasoline/LPG models: Fuel select switch

Move the fuel select switch to the gasoline position to select gasoline. Move the fuel select switch to the LPG position to select LPG.

### 21 Proportional control handle for secondary boom up/down function

Move the control handle up and the secondary boom will raise. Move the control handle down and the secondary boom will lower.



### 22 Primary boom extend/retract switch

Move the primary boom extend/retract switch up and the primary boom will retract. Move the boom extend/retract switch down and the primary boom will extend.



### 23 Dual axis proportional control handle for primary boom up/down and turntable rotate left/right functions

Move the control handle up and the primary boom will raise. Move the control handle down and the primary boom will lower.



Move the control handle to the right and the turntable will rotate to the right. Move the control handle to the left and the turntable will rotate to the left.





# Inspections



---

## Do Not Operate Unless:

- You learn and practice the principles of safe machine operation contained in this operator's manual.
  - 1 Avoid hazardous situations.
  - 2 Always perform a pre-operation inspection.**
  - Know and understand the pre-operation inspection before going on to the next section.**
  - 3 Always perform function tests prior to use.
  - 4 Inspect the workplace.
  - 5 Only use the machine as it was intended.

## Pre-operation Inspection Fundamentals

It is the responsibility of the operator to perform a pre-operation inspection and routine maintenance.

The pre-operation inspection is a visual inspection performed by the operator prior to each work shift. The inspection is designed to discover if anything is apparently wrong with a machine before the operator performs the function tests.

The pre-operation inspection also serves to determine if routine maintenance procedures are required. Only routine maintenance items specified in this manual may be performed by the operator.

Refer to the list on the next page and check each of the items.

If damage or any unauthorized variation from factory delivered condition is discovered, the machine must be tagged and removed from service.

Repairs to the machine may only be made by a qualified service technician, according to the manufacturer's specifications. After repairs are completed, the operator must perform a pre-operation inspection again before going on to the function tests.

Scheduled maintenance inspections shall be performed by qualified service technicians, according to the manufacturer's specifications and the requirements listed in the responsibilities manual.

# Inspections

## Pre-operation Inspection

- Be sure that the operator's, safety and responsibilities manuals are complete, legible and in the storage container located in the platform.
- Be sure that all decals are legible and in place. See Inspections section.
- Check for hydraulic oil leaks and proper oil level. Add oil if needed. See Maintenance section.
- Check for battery fluid leaks and proper fluid level. Add distilled water if needed. See Maintenance section.
- Check for engine oil leaks and proper oil level. Add oil if needed. See Maintenance section.
- Check for engine coolant leaks and proper level of coolant. Add coolant if needed. See Maintenance section.
- Z-45/25 RT and Z-45/25J RT model with air-filled tires: Check for proper tire pressure. Add air if needed. See Maintenance section.

Check the following components or areas for damage, improperly installed or missing parts and unauthorized modifications:

- Electrical components, wiring and electrical cables
- Hydraulic hoses, fittings, cylinders and manifolds
- Fuel and hydraulic tanks
- Drive and turntable motors and drive hubs

- Wear pads
- Tires and wheels
- Engine and related components
- Limit switches and horn
- Alarms and beacons (if equipped)
- Nuts, bolts and other fasteners
- Platform entry mid-rail or gate

Check entire machine for:

- Cracks in welds or structural components
- Dents or damage to machine
- Excessive rust, corrosion or oxidation
- Be sure that all structural and other critical components are present and all associated fasteners and pins are in place and properly tightened.
- After you complete your inspection, be sure that all compartment covers are in place and latched.

# Inspections



---

## Do Not Operate Unless:

- You learn and practice the principles of safe machine operation contained in this operator's manual.

- 1 Avoid hazardous situations.
- 2 Always perform a pre-operation inspection.

**3 Always perform function tests prior to use.**

**Know and understand the function tests before going on to the next section.**

- 4 Inspect the workplace.
- 5 Only use the machine as it was intended.

## Function Test Fundamentals

The function tests are designed to discover any malfunctions before the machine is put into service. The operator must follow the step-by-step instructions to test all machine functions.

A malfunctioning machine must never be used. If malfunctions are discovered, the machine must be tagged and removed from service. Repairs to the machine may only be made by a qualified service technician, according to the manufacturer's specifications.

After repairs are completed, the operator must perform a pre-operation inspection and function tests again before putting the machine into service.

## At the Ground Controls

- 1 Select a test area that is firm, level and free of obstruction.
- 2 Turn the key switch to ground control.
- 3 Pull out the red Emergency Stop button to the on position.
- ⊙ Result: The beacon (if equipped) should flash.
- 4 Start the engine. See Operating Instructions section.


## Test Emergency Stop

- 5 Push in the red Emergency Stop button to the off position.
- ⊙ Result: The engine will shut off after 2 to 3 seconds.
- 6 Pull out the red Emergency Stop button to the on position and restart the engine.

# Inspections

## Test Machine Functions


- 7 Do not push and hold the function enable button. Attempt to activate each boom and platform function toggle switch.



- ⊙ Result: No boom and platform functions should operate.
- 8 Press and hold the function enable button and activate each boom and platform function toggle switch.
- ⊙ Result: All boom and platform functions should operate through a full cycle. The descent alarm should sound while the boom is lowering.

## Test the Tilt Sensor

- 9 Turn the key switch to platform control. Pull out the platform red Emergency Stop button to the on position.
- 10 Open the engine side turntable cover and locate the tilt sensor to the right of the hydraulic pump.

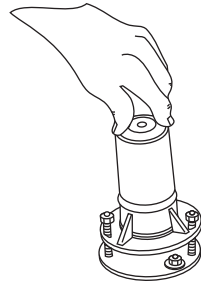

- 11 Press down one side of the tilt sensor.
- ⊙ Result: The alarm, located in the platform, should sound.

## Test Emergency Controls

- 12 Turn the key switch to ground control and shut the engine off.
- 13 Pull out the red Emergency Stop button to the on position.
- 14 Simultaneously hold the emergency power switch on and activate each boom function toggle switch.



Note: To conserve battery power, test each function through a partial cycle.

- ⊙ Result: All boom functions should operate.

## At the Platform Controls

### Test Emergency Stop

- 15 Turn the key switch to platform control and restart the engine.
- 16 Push in the platform red Emergency Stop button to the off position.
- ⊙ Result: The engine will shut off after 2 to 3 seconds.
- 17 Pull out the red Emergency Stop button and restart the engine.

### Test the Horn

- 18 Press the horn button.
- ⊙ Result: The horn should sound.

# Inspections

## Test the Foot Switch

- 19 Push in the platform red Emergency Stop button to the off position.
- 20 Pull out the red Emergency Stop button to the on position and do not start the engine.
- 21 Press down the foot switch and attempt to start the engine by moving the start toggle switch to either side.
  - ⊙ Result: The engine should not start.
- 22 Do not press down the foot switch and restart the engine.
  - ⊙ Result: The engine should start.
- 23 Do not press down the foot switch and test each machine function.
  - ⊙ Result: No functions should operate.

## Test Machine Functions

- 24 Press down the foot switch.
- 25 Activate each machine function control handle or toggle switch.
  - ⊙ Result: All boom and platform functions should operate through a full cycle.

## Test the Steering

- 26 Press down the foot switch.
- 27 Press the thumb rocker switch on top of the drive control handle in the direction indicated by the blue triangle on the control panel OR slowly move the control handle in the direction indicated by the blue triangle.
  - ⊙ Result: The steer wheels should turn in the direction that the blue triangles point on the drive chassis.
- 28 Press the thumb rocker switch in the direction indicated by the yellow triangle on the control panel OR slowly move the control handle in the direction indicated by the yellow triangle.
  - ⊙ Result: The steer wheels should turn in the direction that the yellow triangles point on the drive chassis.

# Inspections


## Test Drive and Braking

- 29 Press down the foot switch.
- 30 Slowly move the drive control handle in the direction indicated by the blue arrow on the control panel until the machine begins to move, then return the handle to the center position.
  - ⊙ Result: The machine should move in the direction that the blue arrow points on the drive chassis, then come to an abrupt stop.
- 31 Slowly move the control handle in the direction indicated by the yellow arrow on the control panel until the machine begins to move, then return the handle to the center position.
  - ⊙ Result: The machine should move in the direction that the yellow arrow points on the drive chassis, then come to an abrupt stop.

Note: The brakes must be able to hold the machine on any slope it is able to climb.


## Test the Drive Enable System

- 32 Press down the foot switch and lower the boom to the stowed position.
- 33 Rotate the turntable until the primary boom moves past one of the non-steer wheels.
  - ⊙ Result: The drive enable indicator light should come on and remain on while the boom is anywhere in the range shown.
- 34 Move the drive control handle off center.
  - ⊙ Result: The drive function should not operate.
- 35 Move and hold the drive enable toggle switch to either side and slowly move the drive control handle off center.
  - ⊙ Result: The drive function should operate.

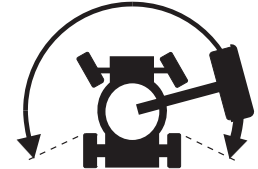

Note: When the drive enable system is in use, the machine may drive in the opposite direction that the drive and steer control handle is moved.

Use the color-coded direction arrows on the platform controls and the drive chassis to identify the direction of travel.

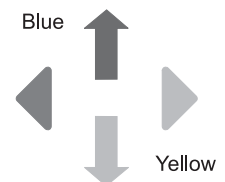

# Inspections

## Test Limited Drive Speed

- 36 Press down the foot switch.
- 37 Raise the primary boom approximately 2 ft / 61 cm.
- 38 Slowly move the drive control handle to the full drive position.
- ⊙ Result: The maximum achievable drive speed with the primary boom raised should not exceed 1 ft / 30 cm per second.
- 39 Lower the primary boom to the stowed position.
- 40 Raise the secondary boom approximately 2 ft / 61 cm.
- 41 Slowly move the drive control handle to the full drive position.
- ⊙ Result: The maximum achievable drive speed with the secondary boom raised should not exceed 1 ft / 30 cm per second.
- 42 Lower the secondary boom to the stowed position.
- 43 Extend the primary boom approximately 1 ft / 30 cm.
- 44 Slowly move the drive control handle to the full drive position.
- ⊙ Result: The maximum achievable drive speed with the primary boom extended should not exceed 1 ft / 30 cm per second.
- 45 Retract the boom to the stowed position.
- If the drive speed with the primary boom raised, the secondary boom raised or the primary boom extended exceeds 1 ft / 30 cm per second, immediately tag and remove the machine from service.

## Test the Oscillating Axle (if equipped)

- 46 Start the engine from the platform controls.
- 47 Drive the right steer tire up onto a 6 in / 15 cm block or curb.
- ⊙ Result: The three remaining tires should stay in firm contact with the ground.
- 48 Drive the left steer tire up onto a 6 in / 15 cm block or curb.
- ⊙ Result: The three remaining tires should stay in firm contact with the ground.
- 49 Drive both steer tires up onto a 6 in / 15 cm block or curb.
- ⊙ Result: The non-steer tires should stay in firm contact with the ground.

## Test Emergency Controls

- 50 Shut the engine off.
- 51 Pull out the red Emergency Stop button to the on position.
- 52 Press down the foot switch.
- 53 Simultaneously hold the emergency power switch on and activate each boom function toggle switch.



Note: To conserve battery power, test each function through a partial cycle.

- ⊙ Result: All boom functions should operate. Drive functions should not operate with auxiliary power.

---

# Inspections

## Test Aircraft Protection Package (if equipped)

- 54 Extend the primary boom approximately 1 ft / 30 cm.
- 55 Move the yellow bumper at the bottom of the platform 4 inches / 10 cm in any direction.
- 56 Activate each function control handle or toggle switch.
- ⊙ Result: No boom and steer functions should operate.
- 57 Move and hold the aircraft protection override switch.



- 58 Activate each function control handle or toggle switch.
- ⊙ Result: All boom and steer functions should operate.



# Inspections



## Do Not Operate Unless:

- You learn and practice the principles of safe machine operation contained in this operator's manual.
  - 1 Avoid hazardous situations.
  - 2 Always perform a pre-operation inspection.
  - 3 Always perform function tests prior to use.
  - 4 Inspect the workplace.**

**Know and understand the workplace inspection before going on to the next section.**
  - 5 Only use the machine as it was intended.

## Workplace Inspection Fundamentals

The workplace inspection helps the operator determine if the workplace is suitable for safe machine operation. It should be performed by the operator prior to moving the machine to the workplace.

It is the operator's responsibility to read and remember the workplace hazards, then watch for and avoid them while moving, setting up and operating the machine.

## Workplace Inspection Checklist

Be aware of and avoid the following hazardous situations:

- drop-offs or holes
- bumps, floor obstructions or debris
- sloped surfaces
- unstable or slippery surfaces
- overhead obstructions and high voltage conductors
- hazardous locations
- inadequate surface support to withstand all load forces imposed by the machine
- wind and weather conditions
- the presence of unauthorized personnel
- other possible unsafe conditions

# Inspections


## Inspection for Decals with Words

Determine whether the decals on your machine have words or symbols. Use the appropriate inspection to verify that all decals are legible and in place.


Below is a numerical list with quantities and descriptions.

Part No.	Decal Description	Qty
27204	Arrow – Blue	1
27205	Arrow – Yellow	1
27206	Triangle – Blue	2
27207	Triangle – Yellow	2
28158	Label – Unleaded	1
28159	Label – Diesel	1
28160	Label – Liquid Petroleum Gas	1
28174	Label – Power to Platform, 230V	2
28175	Warning – Compartment Access	1
28176	Label – Missing Manuals	1
28235	Label – Power to Platform, 115V	2
28236	Warning – Improper Operation	1
31060	Danger – Tip-over Hazard, Limit Switch	3
31788	Danger – Explosion/Burn Hazard	1
40434	Label – Lanyard Anchorage Point	8
44981	Label – Air Line to Platform (option)	2
52475	Label – Transport Tie-down	4
52607	Label – Test Switch	1
52865	Warning – Annual Inspection Record	1
52969	Cosmetic – Genie Boom	1
62926	Cosmetic – Genie Z-45/25J	1
62927	Cosmetic – Genie Z-45/25	1
62947	Cosmetic – IC Power 4 x 2	1
62948	Cosmetic – IC Power 4 x 4	1
72086	Label – Lifting Point	4
82366	Label – Chevron Rando	1
97548	Instructions – Deutz Engine Specifications (F3L 2011 & D2011 L03i)	1
97602	Warning – Explosion Hazard	1
97815	Label – Lower Mid-rail	1

Part No.	Decal Description	Qty
114258	Danger – Explosion Hazard	1
114390	Danger – Electrocutation Hazard	2
114397	Danger – Tilt-Alarm	1
133278	Label – Low Sulfur Fuel (diesel models)	1
160516	Ground Control Panel with LCD screen	1
214932	Ground Control Panel	1
214933	Platform Control Panel	1
215526	Label – Belt Routing (MSG 425)	1
215527	Instructions – Ford Engine Specifications (MSG-425)	1
218549	Danger – Tip-over Hazard, ANSI, 500 lbs/227 kg	1
218551	Danger – Tip-over Hazard, ANSI, 440 lbs/200 Kg	1
218555	Label – Runaway Hazard, Slope	1
218557	Notice – Tire Specifications	4
218558	Instructions – Hi-Flotation Tire Specs	4
218559	Danger, Warning – Tip-over, Crush Hazard	1
218561	Label – Wheel Load, Z-45/25	4
218562	Label – Wheel Load, Z-45/25J	4
219485	Notice – Operating Instructions	1
219488	Label – Transport Diagram, Z-45	2
822004	Instructions – Perkins Engine Specifications, (404F-22)	1
822131	Instructions - Deutz Engine Specifications (D2.9 L4)	1
823488	Instructions – Perkins Engine Specifications	1
823766	Platform Control Panel, models with LCD screen	1
825579	Instructions – LCD Screen	1
826345	Label – Ultra Low Sulfur Fuel Only (diesel models)	1

 Shading indicates decal is hidden from view, i.e. under covers

# Inspections

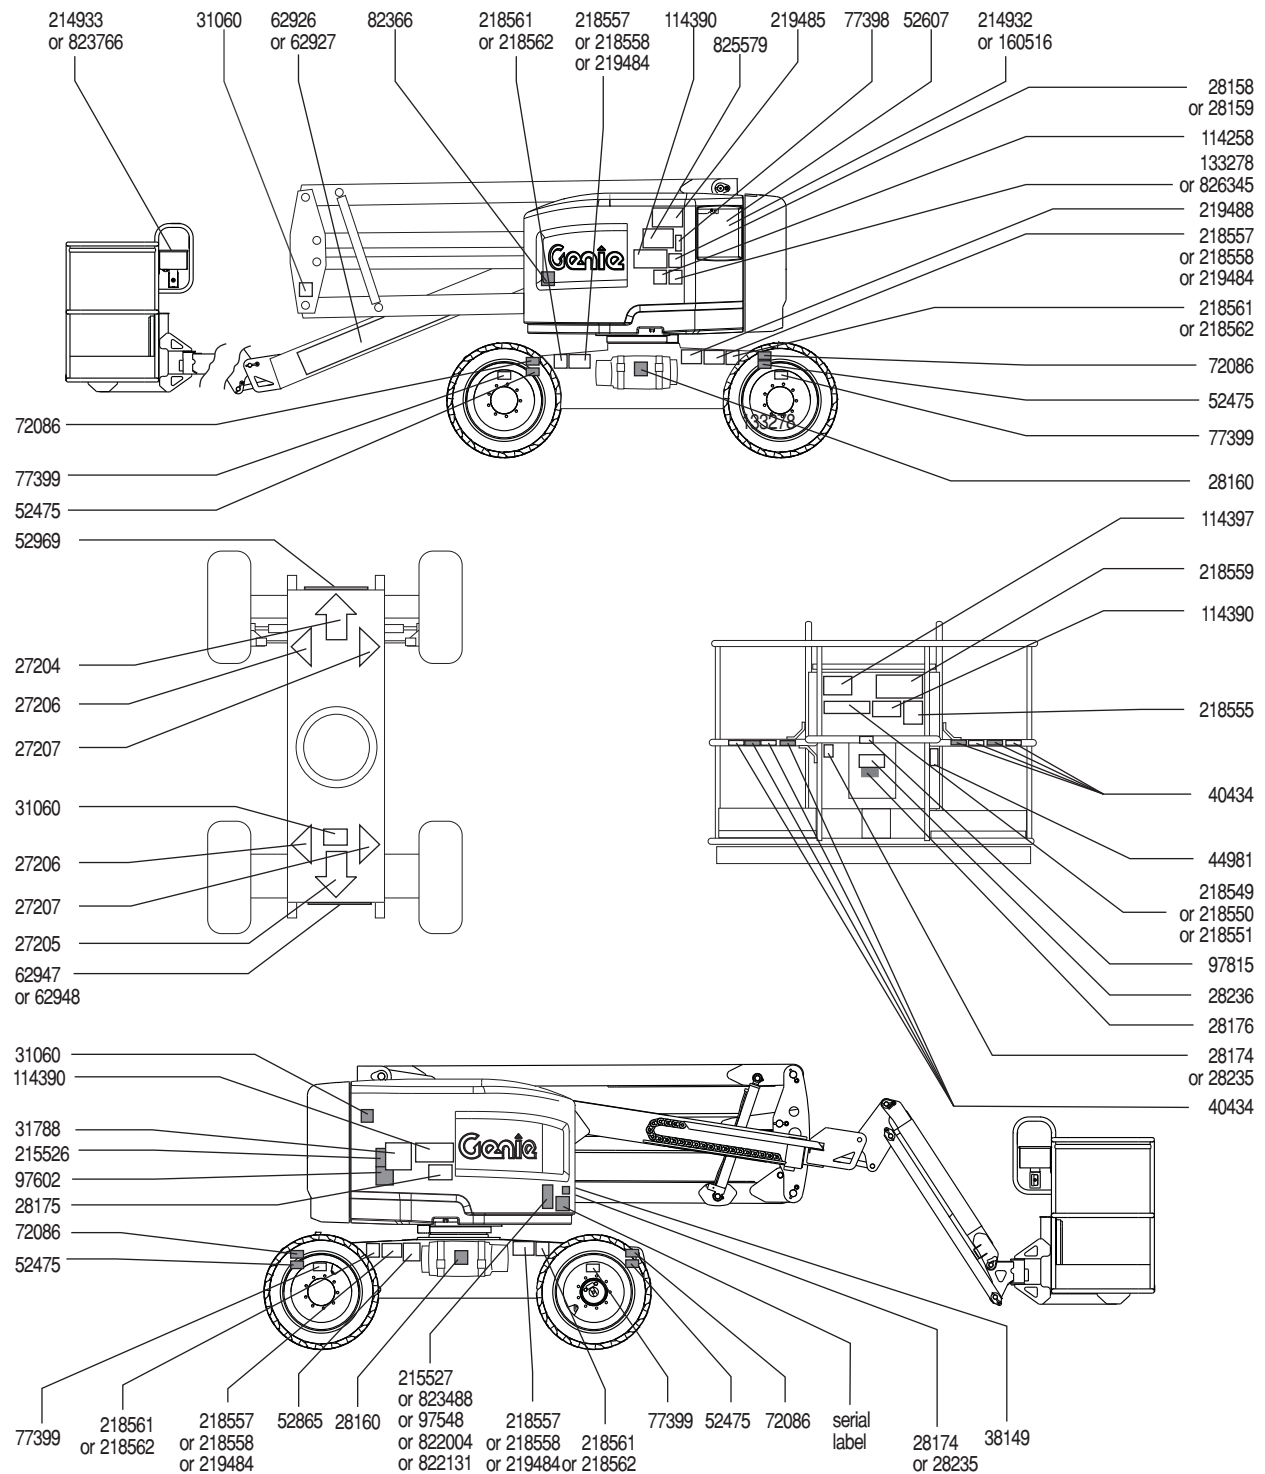

## Inspections


### Inspection for Decals with Symbols

Determine whether the decals on your machine have words or symbols. Use the appropriate inspection to verify that all decals are legible and in place.


Below is a numerical list with quantities and descriptions.

Part No.	Decal Description	Qty
27204	Arrow – Blue	1
27205	Arrow – Yellow	1
27206	Triangle – Blue	2
27207	Triangle – Yellow	2
28158	Label – Unleaded	1
28159	Label – Diesel	1
28160	Label – Liquid Petroleum Gas	2
28174	Label – Power to Platform, 230V	2
28235	Label – Power to Platform, 115V	2
40434	Label – Lanyard Anchorage Point	8
44981	Label – Air Line to Platform (option)	2
52475	Label – Transport Tie-down	4
52969	Cosmetic – Genie Boom	1
62926	Cosmetic – Genie Z-45/25J	1
62927	Cosmetic – Genie Z-45/25	1
62947	Cosmetic – IC Power 4 x 2	1
62948	Cosmetic – IC Power 4 x 4	1
72086	Label – Lifting Point	4
82240	Label – 105 dB	1
82472	Label – Crushing Hazard	1
82473	Label – Compartment Access	1

Part No.	Decal Description	Qty
82481	Label – Battery/Charger Safety	1
82487	Label – Read the Manual	2
97815	Label – Lower Mid-rail	1
114248	Label – Tip-over Hazard, Tilt Alarm	1
114249	Label – Tip-over Hazard, Tires	4
114251	Label – Explosion Hazard	1
114252	Label – Tip-over Hazard, Limit Switches	3
133067	Label – Electrocution Hazard	2
160516	Ground Control Panel with LCD screen	1
214932	Ground Control Panel	1
214933	Platform Control Panel	1
215526	Label – Belt Routing (MSG 425)	1
218561	Label – Wheel Load, Z-45/25	4
218562	Label – Wheel Load, Z-45/25J	4
219488	Label – Transport Diagram, Z-45	2
219950	Label – Tire Pressure, RT Tires	4
219951	Label – Tire Pressure, High Flotation Tires	4
219952	Label – Emergency Lowering	1
219953	Danger, Warning – Tip-over, Crush Hazard, ANSI	1
219955	Danger, Warning – Tip-over, Crush Hazard, 440 lbs	1
219957	Label – Runaway Hazard, Slope	1
823766	Platform Control Panel, models with LCD screen	1

 Shading indicates decal is hidden from view, i.e. under covers

# Inspections

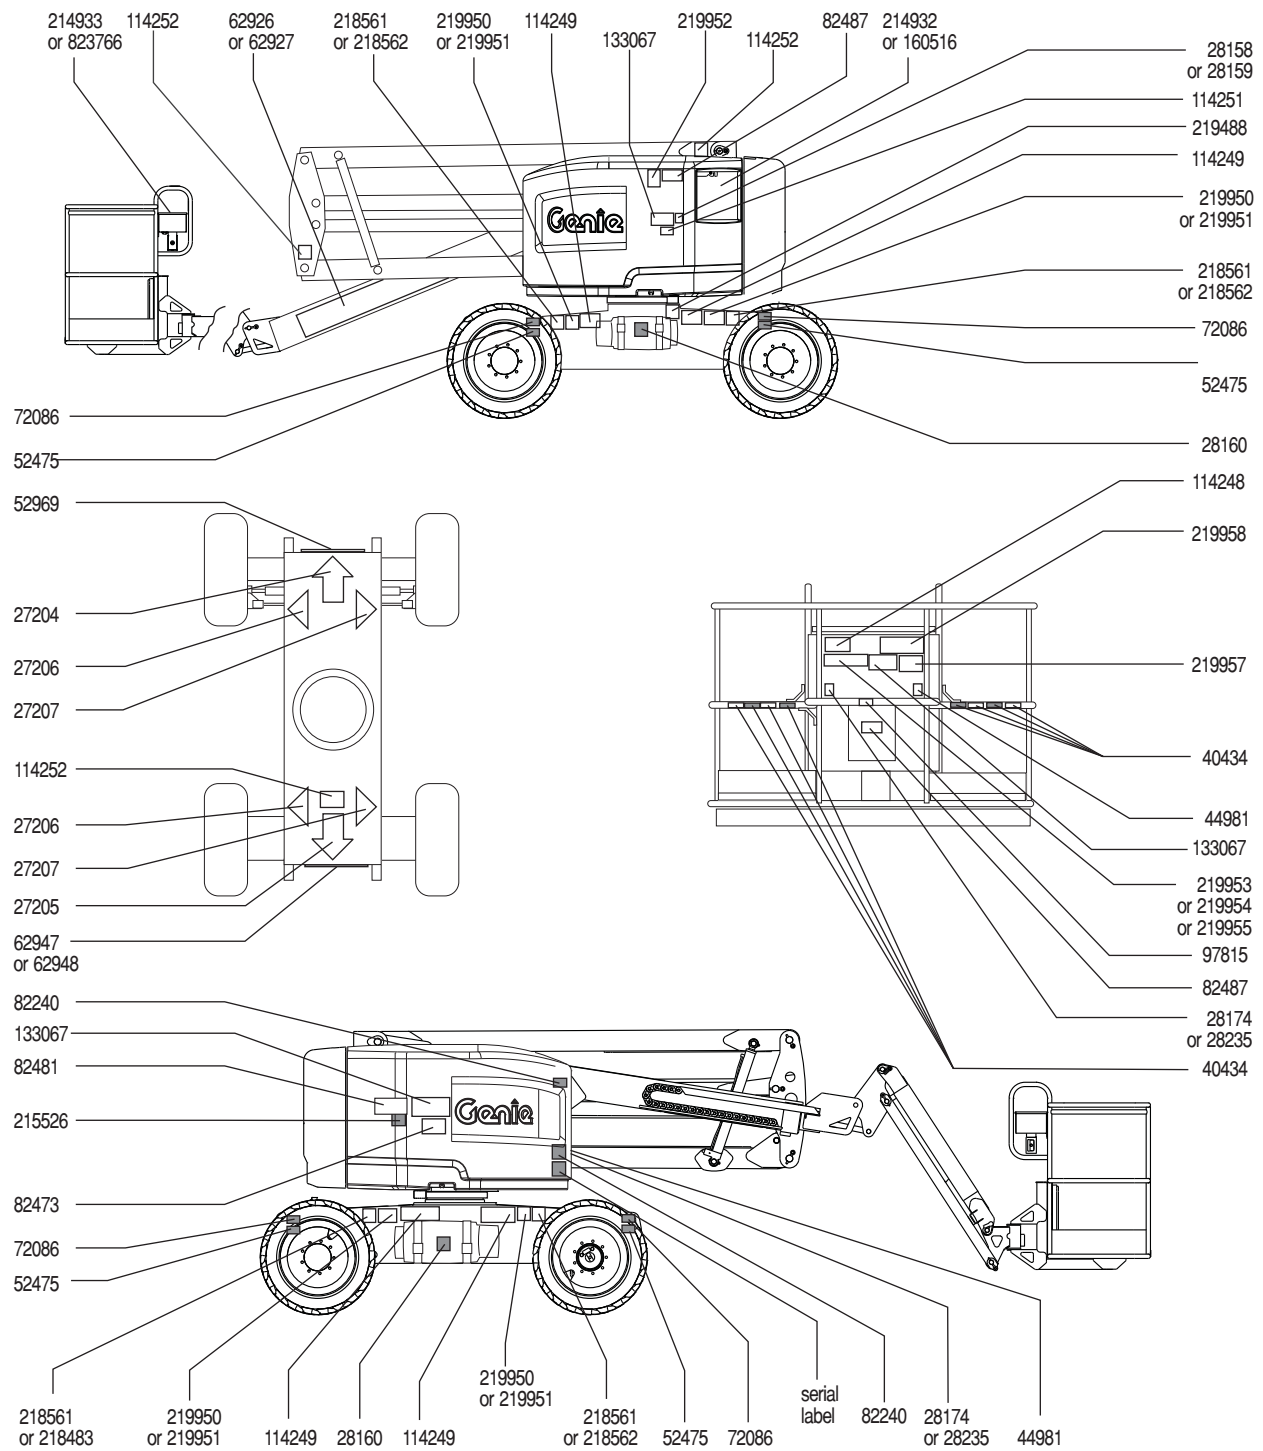

---

# Operating Instructions



---

## Do Not Operate Unless:

- You learn and practice the principles of safe machine operation contained in this operator's manual.
  - 1 Avoid hazardous situations.
  - 2 Always perform a pre-operation inspection.
  - 3 Always perform function tests prior to use.
  - 4 Inspect the workplace.
  - 5 **Only use the machine as it was intended.**

## Fundamentals

The Operating Instructions section provides instructions for each aspect of machine operation. It is the operator's responsibility to follow all the safety rules and instructions in the operator's, safety and responsibilities manuals.

Using the machine for anything other than lifting personnel, along with their tools and materials, to an aerial work site is unsafe and dangerous.

Only trained and authorized personnel should be permitted to operate a machine. If more than one operator is expected to use a machine at different times in the same work shift, they must all be qualified operators and are all expected to follow all safety rules and instructions in the operator's, safety and responsibilities manuals. That means every new operator should perform a pre-operation inspection, function tests, and a workplace inspection before using the machine.

# Operating Instructions

## Starting the Engine

### Gasoline/LPG models

- 1 At the ground controls, turn the key switch to the desired position.
- 2 Be sure both ground and platform control red Emergency Stop buttons are pulled out to the on position.
- 3 Choose fuel by moving the fuel select switch to the desired position.
- 4 Move the engine start toggle switch to either side. If the engine fails to start or dies, the restart delay will disable the start switch for 3 seconds.


### Diesel models

- 1 At the ground controls, turn the key switch to the desired position.
- 2 Be sure both ground and platform control red Emergency Stop buttons are pulled out to the on position.

### Models with glow plug toggle switch:

- 3 Move the glow plug switch to either side and hold for 3 to 5 seconds.
- 4 Move the engine start toggle switch to either side. If the engine fails to start or dies, the restart delay will disable the start switch for 3 seconds.

### Models with automatic glow plugs:

- 5 The LCD screen will display the glow plug symbol when the automatic glow plugs are on. 
- 6 When the automatic glow plug symbol turns off, move the engine start toggle switch to either side. If the engine fails to start or dies, the restart delay will disable the start switch for 3 seconds.

### All models

If the engine fails to start after 15 seconds of cranking, determine the cause and repair any malfunction. Wait 60 seconds before trying to start again.

In cold conditions, 20°F / -6°C and below, warm the engine for 5 minutes before operating to prevent hydraulic system damage.

In extreme cold conditions, 0°F / -18°C and below, machines should be equipped with optional cold start kits. Attempting to start the engine when temperatures are below 0°F / -18°C may require the use of a booster battery.

Gasoline/LPG models: In cold conditions, 20°F / -6°C and below, the machine should be started on gasoline and warmed for 2 minutes, then switched to LPG. Warm engines can be started on LPG.

# Operating Instructions

## Emergency Stop

Push in the red Emergency Stop button to the off position at the ground controls or the platform controls to stop all machine functions and turn the engine off.

Repair any function that operates when either red Emergency Stop button is pushed in.

Selecting and operating the ground controls will override the platform red Emergency Stop button.

## Emergency Power

Use emergency power if the primary power source (engine) fails.

- 1 Turn the key switch to ground or platform control.
- 2 Pull out the red Emergency Stop button to the on position.
- 3 Press down the foot switch when using the controls from the platform.
- 4 Simultaneously hold the emergency power switch to either side and activate the desired function.




## Operation from Ground

- 1 Turn the key switch to ground control.
- 2 Pull out the red Emergency Stop button to the on position.
- 3 Gasoline/LPG models: Choose fuel by moving the fuel select switch to the desired position.
- 4 Start the engine.

## To Position Platform

- 1 Push and hold the function enable button.



- 2 Move the appropriate toggle switch according to the markings on the control panel.

Drive and steer functions are not available from the ground controls.



# Operating Instructions

## Operation from Platform

- 1 Turn the key switch to platform control.
- 2 Pull out both ground and platform red Emergency Stop buttons to the on position.
- 3 Gasoline/LPG models: Choose fuel by moving the fuel select switch to the desired position.
- 4 Start the engine. Do not press down the foot switch when starting the engine.

### To Steer

- 1 Press down the foot switch.
- 2 Slowly move the drive control handle in the direction indicated by blue or yellow triangles OR press the thumb rocker switch located on top of the drive control handle.

Use the color-coded direction arrows on the platform controls and the drive chassis to identify the direction the wheels will turn.

### To Drive

- 1 Press down the foot switch.
- 2 Increase speed: Slowly move the drive control handle off center.

Decrease speed: Slowly move the drive control handle toward center.

Stop: Return the drive control handle to center or release the foot switch.

Use the color-coded direction arrows on the platform controls and the drive chassis to identify the direction the machine will travel.

Machine travel speed is restricted when the booms are raised.

### ▲ Driving on a slope

Determine the uphill, downhill and side slope ratings for the machine and determine the slope grade.



#### Maximum slope rating, platform downhill (gradeability):

2WD: 30% (17°)  
4WD: 45% (24°)



#### Maximum slope rating, platform uphill:

25% (14°)



#### Maximum side slope rating:

25% (14°)

Note: Slope rating is subject to ground conditions and adequate traction.

Be sure the boom is below horizontal and the platform is between the circle-end wheels.

Move the drive speed select switch to machine on incline symbol.

### To determine the slope grade:

Measure the slope with a digital inclinometer OR use the following procedure.

You will need:

- carpenter's level
- straight piece of wood, at least 3 feet / 1 m long
- tape measure

# Operating Instructions


Lay the piece of wood on the slope.

At the downhill end, lay the level on the top edge of the piece of wood and lift the end until the piece of wood is level.

While holding the piece of wood level, measure the vertical distance from the bottom of the piece of wood to the ground.

Divide the tape measure distance (rise) by the length of the piece of wood (run) and multiply by 100.

Example:

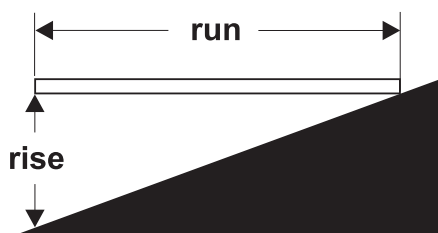

Piece of wood = 144 inches (3.6 m)

Run = 144 inches (3.6 m)

Rise = 12 inches (0.3 m)

$12 \text{ in} \div 144 \text{ in} = 0.083 \times 100 = 8.3\% \text{ grade}$

$0.3 \text{ m} \div 3.6 \text{ m} = 0.083 \times 100 = 8.3\% \text{ grade}$

If the slope exceeds the maximum slope or side slope rating, then the machine must be winched or transported up or down the slope. See Transport and Lifting section.

## Drive Enable

Light on indicates that the boom has moved just past either non-steer wheel and the drive function has been interrupted.



To drive, hold the drive enable switch to either side and slowly move the drive control handle off center.

Be aware that the machine may move in the opposite direction that the drive and steer controls are moved.

Always use the color-coded direction arrows on the platform controls and the drive chassis to identify the direction the machine will travel.

## To Position Platform

- 1 Press down the foot switch.
- 2 Slowly move the appropriate function control handle or toggle switch according to the markings on the control panel.

## Drive Speed Select



- Machine on incline symbol: Low range operation for inclines
- Machine on level surface symbol: High range operation for maximum drive speed

# Operating Instructions

## Generator (if equipped)

To start the generator, move the generator toggle switch to the on position.

Plug a power tool into the power to platform GFCI outlet.

To turn off the generator, move the generator toggle switch to the off position.

Note: Machine functions will not operate while the generator is running and the foot switch is not pressed down. When the foot switch is pressed down, the generator will turn off and the machine functions will operate.



## Machine Not Level Indicator Light




Light on indicates machine is not level. The tilt alarm will be sounding when this light is on. Move the machine to a firm level surface.

## Engine Idle Select (rpm)

When the foot switch is not pressed, the engine will idle at the lowest rpm.

- Turtle symbol: Foot switch activated low idle
- Rabbit symbol: Foot switch activated high idle

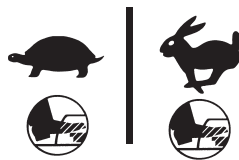

If foot switch activated low idle or high idle do not work, contact service personnel within 24 hours.

Foot switch activated idle settings are disabled by certain fault codes.

## Check Engine Light



Light on and engine stopped: Tag the machine and remove from service.

Light on and engine still running: Contact service personnel within 24 hours.


## Aircraft Protection Package (if equipped)



If the platform bumper comes into contact with an object, the machine will shut down and no functions will operate.

Move and hold the aircraft protection override switch to operate the machine.

## Control Box Heater (if equipped)



Move the control box heater switch up to activate the heater.

## Engine Shut-down indicator light (if equipped)



Light on: Tag and remove the machine from service.

# Operating Instructions

## LCD Screen (if equipped)



The LCD screen displays hour meter, voltage, oil pressure and coolant temperature. The screen also displays fault codes and other service information.

## Perkins Engine

Machines equipped with Perkins diesel engines with an LCD screen have a regeneration mode that should run automatically when needed.

Left amber light on and high temperature text box present: Regeneration mode is running. No service required.

Right side amber light on or flashing: Regeneration is required.

- 1 Push in red Emergency Stop button to turn the machine off.
- 2 Restart the engine. The regeneration mode should run automatically.

Left amber light on and no high temperature text box present: Regeneration mode is turned off. To turn the regeneration mode on:

- 1 Push in red Emergency Stop button to turn the machine off.
- 2 Restart the engine

Flashing red lights: contact service personnel.

Flashing green lights: contact service personnel within 24 hours.

## Deutz engine

Flashing red lights: contact service personnel.

Flashing green lights: contact service personnel within 24 hours.

## After Each Use

- 1 Select a safe parking location—firm level surface, clear of obstruction and traffic.
- 2 Retract and lower the boom to the stowed position.
- 3 Rotate the turntable so that the boom is between the non-steer wheels.
- 4 Turn the key switch to the off position and remove the key to secure from unauthorized use.
- 5 Chock the wheels.

## Transport and Lifting Instructions



### Observe and Obey:

- ☑ Genie provides this securement information as a recommendation. Drivers are solely responsible for making sure machines are properly secured and the correct trailer is selected pursuant to US Department of Transportation regulations, other localized regulations, and their company policy.
- ☑ Genie customers needing to containerize any lift or Genie product should source a qualified freight forwarder with expertise in preparing, loading and securing construction and lifting equipment for international shipment.
- ☑ Only qualified aerial lift operators should move the machine on or off the truck.
- ☑ The transport vehicle must be parked on a level surface.
- ☑ The transport vehicle must be secured to prevent rolling while the machine is being loaded.
- ☑ Be sure the vehicle capacity, loading surfaces and chains or straps are sufficient to withstand the machine weight. Genie lifts are very heavy relative to their size. See the serial label for the machine weight. See the inspections section for the serial label location.
- ☑ Be sure the turntable is secured with the turntable rotation lock before transporting. Be sure the unlock the turntable for operation.


- ☑ Do not drive the machine on a slope that exceeds the uphill, downhill or side slope rating. See Driving on a Slope in the Operating Instructions section.
- ☑ If the slope of the transport vehicle bed exceeds the uphill or downhill maximum slope rating, the machine must be loaded and unloaded using a winch as described in the brake release operation. See the Specifications section for the slope ratings.

### Free-wheel Configuration for Winching

Chock the wheels to prevent the machine from rolling.

2WD models: Release the non-steer wheel brakes by turning over the drive hub disconnect caps.

4WD models: Release the wheel brakes by turning over all four drive hub disconnect caps.

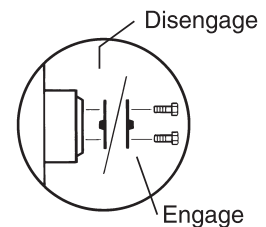

Be sure the winch line is properly secured to the drive chassis tie points and the path is clear of all obstructions.


Reverse the procedures described to re-engage the brakes.

Note: Towing the Genie Z-45/25 or the Z-45/25J is not recommended. If the machine must be towed, do not exceed 2 mph / 3.2 km/h.

## Transport and Lifting Instructions

### Securing to Truck or Trailer for Transit

Always use the turntable rotation lock pin each time the machine is transported.

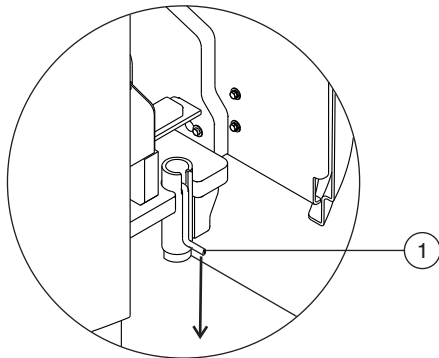

1 Turntable rotation lock pin

Turn the key switch to the off position and remove the key before transporting.

Inspect the entire machine for loose or unsecured items.

### Securing the Chassis

Use chains of ample load capacity.

Use a minimum of 4 chains or straps.


Adjust the rigging to prevent damage to the chains.

For diagram, refer to the Lifting Instructions.

### Securing the Platform – Z-45/25

Make sure the platform is in the stowed position.


Secure the platform with a nylon strap placed over the platform mount near the platform rotator (see below). Do not use excessive downward force when securing the boom section.

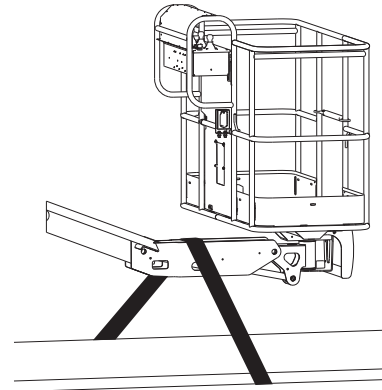

### Securing the Platform - Z-45/25J

Make sure the jib and platform are in the stowed position.

Secure the platform with a nylon strap placed over the platform mount near the platform rotator (see below). Do not use excessive downward force when securing the boom section.

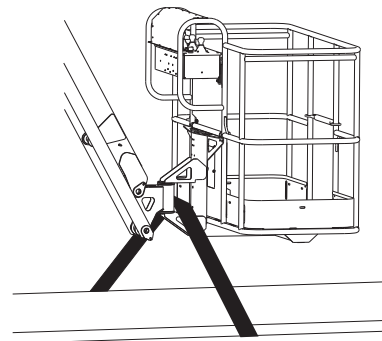

# Transport and Lifting Instructions



## Observe and Obey:

- ☑ Only qualified riggers should rig the machine.
- ☑ Only certified crane operators should lift the machine and only in accordance with the applicable crane regulations.
- ☑ Be sure the crane capacity, loading surfaces and straps or lines are sufficient to withstand the machine weight. See the serial label for the machine weight.

## Lifting Instructions


Fully lower and retract the boom. Fully lower the jib (if equipped). Remove all loose items on the machine.

Determine the center of gravity of your machine using the table and the picture on this page.

Attach the rigging only to the designated lifting points on the machine. There are four lifting points on the chassis.

Adjust the rigging to prevent damage to the machine and to keep the machine level.

Center of gravity	X Axis	Y Axis
Z-45/25, Z-45/25J	47.3 in 120 cm	44 in 112 cm

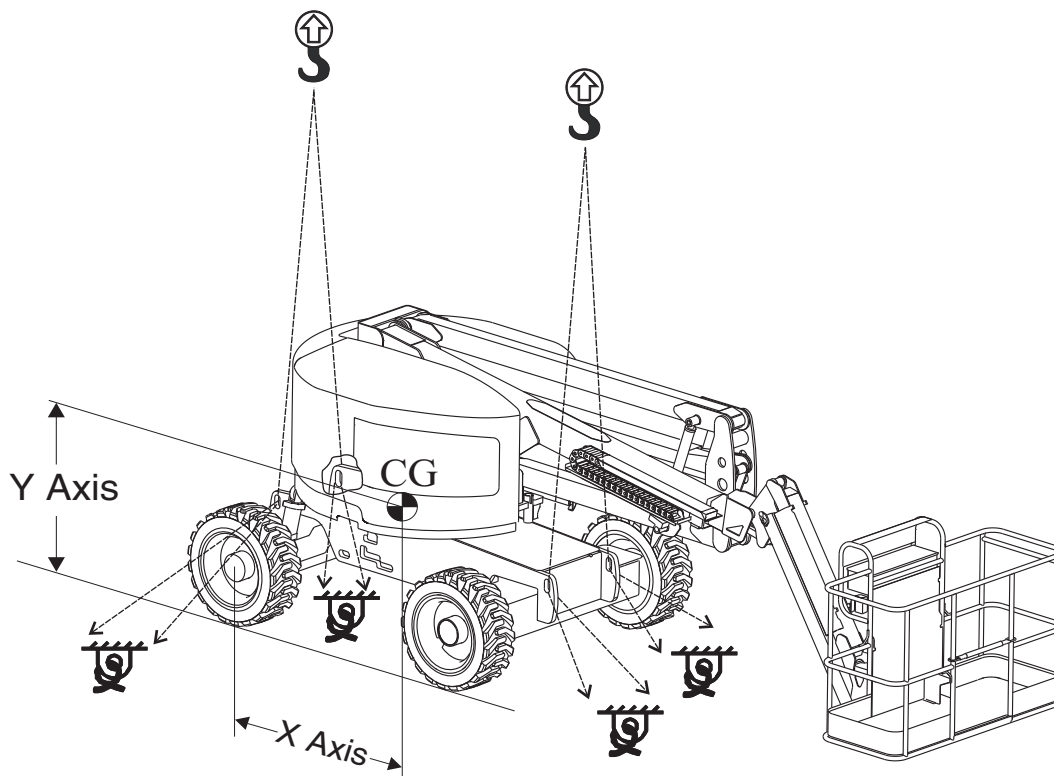

# Maintenance



## Observe and Obey:

- Only routine maintenance items specified in this manual shall be performed by the operator.
- Scheduled maintenance inspections shall be completed by qualified service technicians, according to the manufacturer's specifications and the requirements specified in the responsibilities manual.
- Use only Genie approved replacement parts.

## Maintenance Symbols Legend

The following symbols have been used in this manual to help communicate the intent of the instructions. When one or more of the symbols appear at the beginning of a maintenance procedure, it conveys the meaning below.



Indicates that tools will be required to perform this procedure.



Indicates that new parts will be required to perform this procedure.



Indicates that a cold engine is required before performing this procedure.

## Check the Engine Oil Level



Maintaining the proper engine oil level is essential to good engine performance and service life. Operating the machine with an improper oil level can damage engine components.

Note: Check the oil level with the engine off.

Check the oil level dipstick. Add oil as needed.

Perkins 404D-22 Engine	
Oil type	15W-40
Oil type - cold conditions	5W-40
Perkins 404F-22 Engine	
Oil type	15W-40
Oil type - cold conditions	25W-40
Ford MSG-425 EFI Engine	
Oil type	5W-20
Deutz D2011 L03i Engine	
Oil type	15W-40
Oil type - cold conditions	5W-40
Deutz D2.9 L4 Engine	
Oil type	15W-40
Oil type - cold conditions	5W-40



# Maintenance

## Diesel Fuel Requirements



Satisfactory engine performance is dependent on the use of a good quality fuel. The use of a good quality fuel will give the following result: long engine life and acceptable exhaust emissions levels.

Minimum diesel fuel requirements for each engine are listed below.

Perkins 404D-22 Engine	
Fuel Type	Low Sulfur Diesel (LSD)
Perkins 404F-22 Engine	
Fuel Type	Ultra Low Sulfur Diesel (ULSD)
Deutz D2011 L03i Engine	
Fuel Type	Low Sulfur Diesel (LSD)
Deutz D2.9 L4 Engine	
Fuel Type	Ultra Low Sulfur Diesel (ULSD)

## Check the Hydraulic Oil Level



Maintaining the hydraulic oil at the proper level is essential to machine operation. Improper hydraulic oil levels can damage hydraulic components. Daily checks allow the inspector to identify changes in oil level that might indicate the presence of hydraulic system problems.

- 1 Be sure that the boom is in the stowed position.
- 2 Visually inspect the sight gauge located on the side of the hydraulic oil tank.
- ⊙ Result: The hydraulic oil level should be within the top 2 inches / 5 cm of the sight gauge.
- 3 Add oil as needed. Do not overfill.

### Hydraulic oil specifications

Hydraulic oil type	Chevron Rando HD equivalent
--------------------	-----------------------------

# Maintenance

## Check the Engine Coolant Level – Liquid Cooled Models



Maintaining the engine coolant at the proper level is essential to engine service life. Improper coolant level will affect the engine's cooling capability and damage engine components. Daily checks will allow the inspector to identify changes in coolant level that might indicate cooling system problems.

- ▲ Burn hazard. Beware of hot engine parts and coolant. Contact with hot engine parts and/or coolant may cause severe burns.
  - ▲ Burn hazard. Do not remove the radiator cap if the engine has been running. Contact with pressurized coolant may cause severe burns. Allow engine to cool before removing the radiator cap.
- 1 Check the fluid level in the coolant recovery tank. Add fluid as needed.
- ⊙ Result: The fluid level should be at the FULL mark on the tank or visible in the sight gauge.

## Check the Batteries



Proper battery condition is essential to good machine performance and operational safety. Improper fluid levels or damaged cables and connections can result in component damage and hazardous conditions.

- ▲ Electrocutation hazard. Contact with hot or live circuits may result in death or serious injury. Remove all rings, watches and other jewelry.
  - ▲ Bodily injury hazard. Batteries contain acid. Avoid spilling or contacting battery acid. Neutralize battery acid spills with baking soda and water.
- 1 Put on protective clothing and eye wear.
  - 2 Be sure that the battery cable connections are tight and free of corrosion.
  - 3 Be sure that the battery hold-down brackets are in place and secure.

Note: Adding terminal protectors and a corrosion preventative sealant will help eliminate the corrosion on the battery terminals and cables.

# Maintenance

## Check the Tire Pressure



- ▲ Tip-over hazard. An over-inflated tire can explode which may compromise machine stability and cause the machine to tip over.
- ▲ Tip-over hazard. The use of temporary flat tire repair products may lead to tire failure which could compromise machine stability and cause the machine to tip over.
- ▲ Bodily injury hazard. An over-inflated tire can explode and may cause death or serious injury.

Note: This procedure does not need to be performed on machines equipped with foam-filled tires.

- 1 Check each tire with an air pressure gauge. Add air as needed.

---

### Tire specifications

Models with Aircraft Protection Package	Foam-filled Only
Rough terrain tire Tire size: 315/55 D20	60 psi / 3.5 bar
High flotation tires Tire size: 33/16LL500	38 psi / 2.6 bar

## Scheduled Maintenance

Maintenance performed quarterly, annually and every two years must be completed by a person trained and qualified to perform maintenance on this machine according to the procedures found in the service manual for this machine.

Machines that have been out of service for more than three months must receive the quarterly inspection before they are put back into service.

# Specifications

## Z-45/25 (no jib)

Height, working maximum	51 ft 10 in	15.97 m
Height, platform maximum	45 ft 10 in	13.97 m
Height, stowed maximum	7 ft	2.13 m
Horizontal reach, platform 90°, maximum	24 ft 7 in	7.49 m
Width, standard tires	7 ft 6 in	2.29 m
Width, high flotation tires	8 ft 5 in	2.56 m
Length, stowed	17 ft 8 in	5.38 m
Maximum load capacity	500 lbs	227 kg
Maximum wind speed	28 mph	12.5 m/s
Wheelbase	6 ft 8 in	2.03 m
Turning radius (outside)	14 ft 9 in	4.5 m
Turning radius (inside)	5 ft 6 in	1.68 m
Turntable rotation		355°
Turntable tailswing	0 in	0 cm
Drive speed, stowed	4.5 mph	7.2 km/h
Drive speed, booms raised	0.9 ft/s	0.3 m/s
Ground clearance, center	14.8 in	37.5 cm
Ground clearance, axle	10.5 in	26.7 cm
Controls	12V DC proportional	
Weight		
2WD	13100 lbs	5942 kg
4WD	13400 lbs	6078 kg
Machine weights vary with option configurations.		
Platform dimensions, 6 foot (length x width)	72 in x 30 in	183 cm x 76 cm
Platform leveling	self-leveling	
Platform rotation	180°	

AC outlet in platform	standard	
Hydraulic pressure, maximum (boom functions)	3200 psi	221 bar
System voltage	12V	
Tire size, 4WD & 2WD RT	315/55 D20	
Tire size, High Flotation	33/16LL500	

### Maximum slope rating, stowed position, 2WD

Platform downhill	30% (17°)	
Platform uphill	25% (14°)	
Side slope	25% (14°)	

### Maximum slope rating, stowed position, 4WD

Platform downhill	45% (24°)	
Platform uphill	25% (14°)	
Side slope	25% (14°)	

Note: Slope rating is subject to ground conditions and adequate traction.

Fuel tank capacity	17 gallons	64.4 liters
--------------------	------------	-------------

### Floor loading information

Tire load maximum	6900 lbs	3130 kg
Tire contact pressure	60 psi	345 kPa
Occupied floor pressure (2WD)	185 psf	902 kg/m <sup>2</sup> 8.85 kPa
Occupied floor pressure (4WD)	189 psf	923 kg/m <sup>2</sup> 9.05 kPa

Note: Floor loading information is approximate and does not incorporate different option configurations. It should be used only with adequate safety factors.

Continuous improvement of our products is a Genie policy. Product specifications are subject to change without notice or obligation.

# Specifications

<b>Z-45/25J (jib)</b>		
Height, working maximum	52 ft 1 in	16.05 m
Height, platform maximum	46 ft 1 in	14.05 m
Height, stowed maximum	7 ft	2.13 m
Horizontal reach, maximum	24 ft 8 in	7.52 m
Width, standard tires	7 ft 6 in	2.29 m
Width, high flotation tires	8 ft 5 in	2.56 m
Length, stowed	21 ft 10 in	6.65 m
Maximum load capacity	500 lbs	227 kg
Maximum load capacity, Models with Aircraft Protection Package	440 lbs	200 kg
Maximum wind speed	28 mph	12.5 m/s
Wheelbase	6 ft 8 in	2.03 m
Turning radius (outside)	14 ft 9 in	4.5 m
Turning radius (inside)	5 ft 6 in	1.68 m
Turntable rotation		355°
Turntable tailswing	0 in	0 cm
Drive speed, stowed	4.5 mph	7.2 km/h
Drive speed, booms raised	0.9 ft/s	0.3 m/s
Ground clearance, center	14.8 in	37.5 cm
Ground clearance, axle	10.5 in	26.7 cm
Controls	12V DC proportional	
Weight		
2WD	13200 lbs	5987 kg
4WD	13500 lbs	6123 kg
Machine weights vary with option configurations.		
Platform dimensions, 6 foot	72 in x 30 in 183 cm x 76 cm	
Platform leveling	self-leveling	
Platform rotation	160°	

AC outlet in platform	standard	
Hydraulic pressure, maximum (boom functions)	3200 psi	221 bar
System voltage	12V	
Tire size, 4WD & 2WD RT	315/55 D20	
Tire size, High Flotation	33/16LL500	

### Maximum slope rating, stowed position, 2WD

Platform downhill	30% (17°)	
Platform uphill	25% (14°)	
Side slope	25% (14°)	

### Maximum slope rating, stowed position, 4WD

Platform downhill	45% (24°)	
Platform uphill	25% (14°)	
Side slope	25% (14°)	

Note: Slope rating is subject to ground conditions and adequate traction.

Fuel tank capacity	17 gallons	64.4 liters
--------------------	------------	-------------

### Floor loading information


Tire load maximum	8050 lbs	3651 kg
Tire contact pressure	60 psi	414 kPa
Occupied floor pressure (2WD)	186 psf	909 kg/m <sup>2</sup> 8.92 kPa
Occupied floor pressure (4WD)	190 psf	930 kg/m <sup>2</sup> 9.12 kPa

Note: Floor loading information is approximate and does not incorporate different option configurations. It should be used only with adequate safety factors.


Continuous improvement of our products is a Genie policy. Product specifications are subject to change without notice or obligation.

# Specifications

**Z-45/25 Range of Motion**

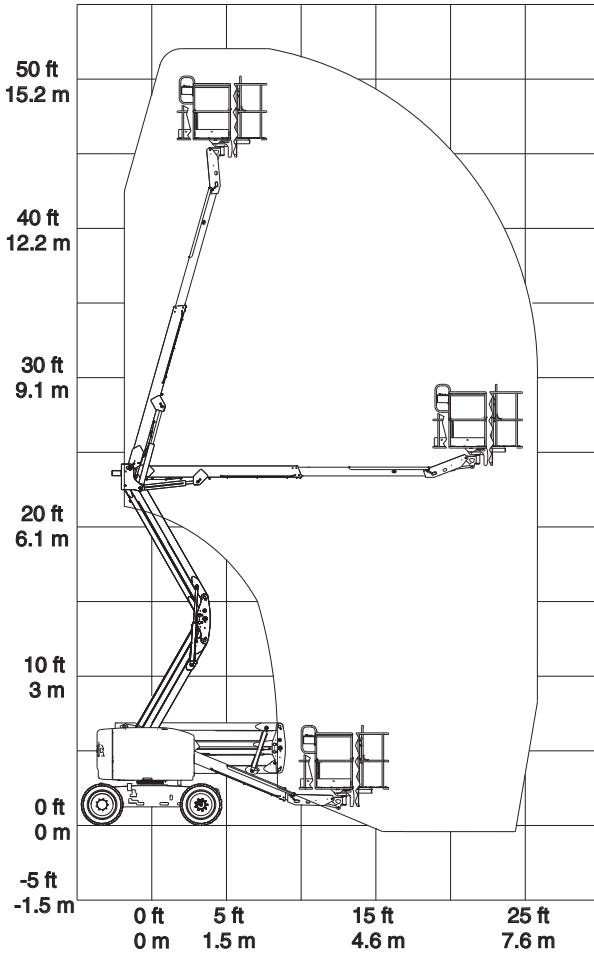

**Z-45/25J Range of Motion Chart**

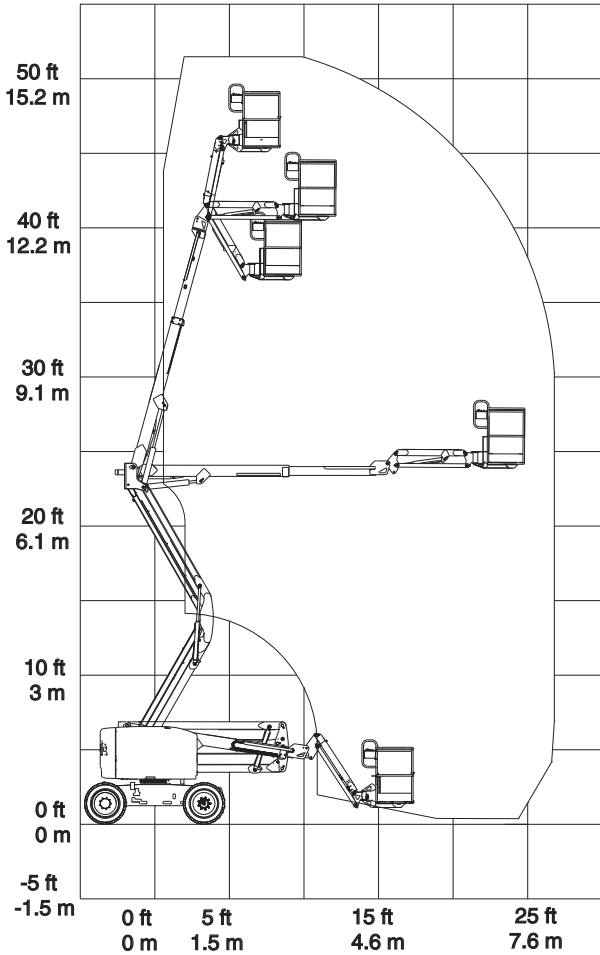



California Proposition 65



Operating, servicing and maintaining this equipment can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. These chemicals can be emitted from or contained in other various parts and systems, fluids and some component wear by-products. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your equipment and vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your equipment or vehicle and after operation. For more information go to [www.P65Warnings.ca.gov/passenger-vehicle](http://www.P65Warnings.ca.gov/passenger-vehicle).

Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information go to [www.P65warnings.ca.gov/diesel](http://www.P65warnings.ca.gov/diesel).